

# NC TURRET PUNCH PRESS HIGH PERFORMANCE TOOLING

High Quality & Technology For  The Future

# CONIC

Since 1976

**AMADA TYPE (THICK TURRET) TOOLING**  
**MURATA TYPE TOOLING**



***JAPAN QUALITY***



**Ver 2.3**

### ABOUT US

Conic has been produced quality punch tools since 1976 in Okayama Japan.

Our tools are used worldwide in the sheetmetal market and that quality is really satisfied from various production customers. Our policy is that we make a high quality tools in timely, in reasonable price to helping customers manufacture sheet metal parts in high productivity and reliability.

We have done a lot of development of new products such as Super Dry Punch(SDP), Conic Long Life Punch(GLP), Conic Hard Punch(CHP) for last long tools.

We recently introduced PROTECH series tool to the market and market reflect strong praise.

Conic would like to be your punch press tool partner.

We look forward to serving you.

### QUALITY



Okayama factory :

ISO 9001:2015 provide superior Quality Management System in 1998 Conic Corp, received ISO9001 authorization, and it has been recognized as a very reliable company, both on the international front and Japan.











### COMPANY HISTORY

- 1976 Established.
- 1979 Tokyo Sales Office opened.
- 1985 Okayama Factory opened.
- 1990 "International Sheet Metal Symposium" held by the company.
- 1992 Tool information and order receiving office was opened.
- 1993 Osaka Branch opened in Higashi-Osaka city.
- 1993 Head Office moved into Okayama Factory.
- 1998 Okayama factory was registered under required operation of international quality management system "ISO-9001".
- 1999 "Super Dry Punch" newly developed and launched.
- 2000 Internet order and quote receiving system was opened.
- 2002 "Conic Hard Punch" newly developed and launched.
- 2009 PROTECH series tooling newly developed and launched.
- 2012 Thailand Factory opened.
- 2013 "Conic Long Life Punch" newly developed and launched.
- 2018 Representative office in Vietnam opened.






# SPECIFICATION OF CONIC TOOLING




## ■Various Shapes

STANDARD SHAPES	WITH RADIUS CORNERS	CORNER ROUNDING
<p>■ ROUND (RO)    ■ SQUARE (SQ)    ■ RECTANGLE (RE)</p>    <p>■ OBROUND (OB)    ■ SINGLE D (SD)    ■ DOUBLE D (DD)</p>   	<p>■ SQUARE WITH RADIUS CORNERS</p>  <p>■ RECTANGLE WITH RADIUS CORNERS</p> 	<p>■ CN-42</p>  <p>■ CN-41</p> 

Note : Square and Rectangle punch corner has small radius (R0.2) for prevent crack of punch tip.  
If it is not necessary, please inform us.

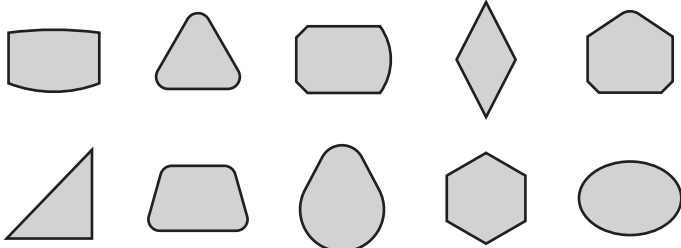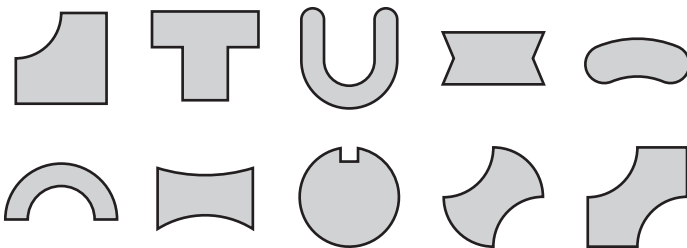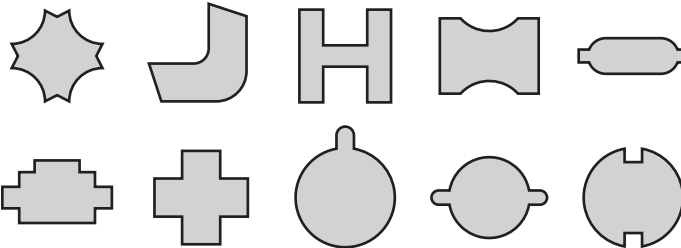SPECIAL SHAPES (CLASS-1)	SPECIAL SHAPES (CLASS-2)
	
SPECIAL SHAPES (CLASS-3)	SPECIAL SHAPES (CLASS-4)
	<p>More complicated figure</p> <p>When make order, please inform to us the center position of the tool.</p> <p>CONIC is possible to produce other than this form list, please contact us.</p>





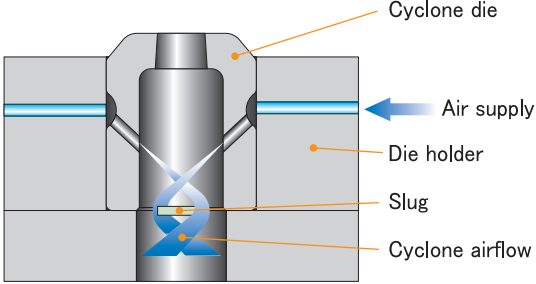
## ■Shear Angle Type For Punch

Roof Top Shear		To reduce tonnage and noise by added angle 2° (or 5°) at punch shear for station C(2''), D(3-1/2'') and E(4-1/2'') with free of charge.
Inverse Roof Top Shear		To prevent touch of punch and die when use as shearing punch tool. (Need additional charge) It is possible to cross Inverse Roof Shape shear angle when order square.
Concave Shear		To prevent touch of punch and die when use as shearing punch tool. (Need additional charge) It is possible to cross Inverse Roof Shape shear angle when order square.

Note : Without notification, station C(2'') and D(3-1/2'') are going to be flat punch. Station E(4-1/2'') will be added roof top shear.

# SPECIFICATION OF CONIC TOOLING


## ■ Prevent Slug Pulling
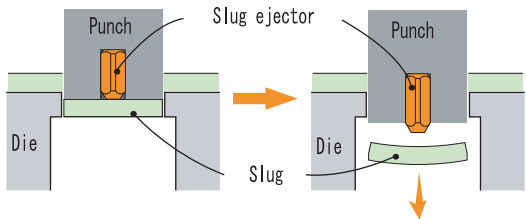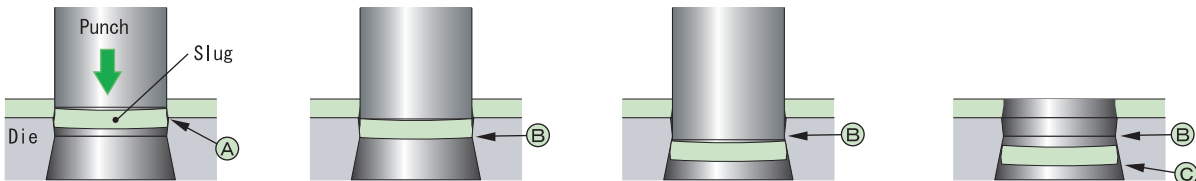
<b>PUNCH</b>	<p><b>Slug Ejector</b></p> <p>Slug ejector push down the slug. It will be installed to over <math>\phi 4</math> for round and over 6 mm width shape tool as our standard. Please contact us, when punch thick material sheet or hard material with small punch diameter.</p> 
<b>DIE</b>	<p><b>Slug Catcher Die</b></p> <p>Standard shapes and special shapes have this function as standard. (Except : Blank type, less than 2mm width die for blank will be parts, punch with heel, die clearance is less than 0.1mm)</p> <ol style="list-style-type: none"> <li>① Material is cut off at [A] part.</li> <li>② The slug is compressed in the process of punching at [B] part.</li> <li>③ Drags the slug through the relief.</li> <li>④ [B] part is narrower than [C] part so the slug cannot come up.</li> </ol> 
	<p><b>Depositron Process</b></p> <p>Put electrical super hard spot onto inside of die hole Except clearance 0.1mm Standard on die diameter <math>\phi 2 \sim \phi 4.5</math></p> 
	<p><b>Straight with taper Die</b></p> <p>Use this specification standard on Blank tool, less than 2mm width die for blank will be parts, punch with heel die clearance is less than 0.1mm</p> 
	<p><b>Cyclone Die (Compatible with Amada power vacuum die)</b></p> <p>Cyclone die has small incline holes to provide cyclone airflow to make a strong vacuum area under the die. This vacuum helped to prevent slug pulling problems. This function is working only when punching machine has vacuum die use function as machine option.</p> 



# SPECIFICATION OF CONIC TOOLING

## ■Conic Original Coating

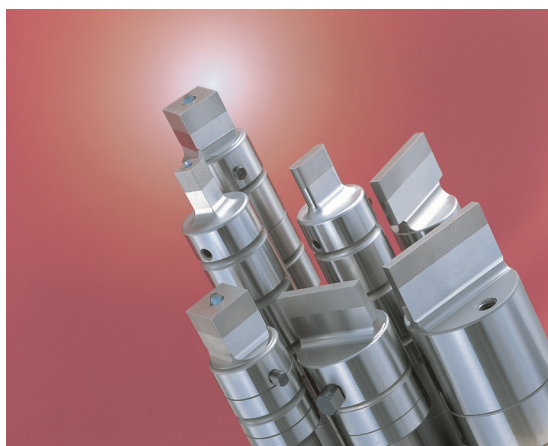


Perfect tool for stainless steel !

## Super Dry Punch (SDP)

This is our best tool. Incredible durability and defeated the common sense that "Stainless is hard to process".

This tool is suitable for night time unattended operation and dry ( no oil lubrication on the sheet metal) condition punching.

Super Dry Punch (SDP) is available with only the following shapes.

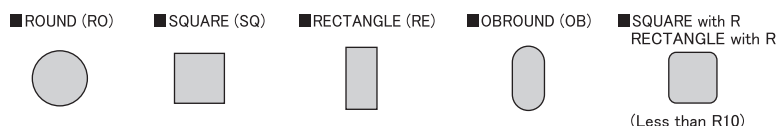

Most efficient in long life and cost !

## Conic Long life Punch (CLP)

High performance for all purpose, especially for mild steel, galvanized steel with high corrosion resistance !

Special shapes are also available for this treatment.



Ultra cost performance tool for reasonable price !

## Conic Hard Punch (CHP)

Reasonable price and suitable for all purpose.

CHP shows high performance reducing adhesion and galling which is more likely to be caused by processing Aluminum and Coated steel sheet.

Total Performance	Punch type	Aptitude			
		Stainless steel (SUS)	Mild steel (SPCC)	Aluminum	Galvanized
<div>High Performance</div> <div>↑</div> <div>↓</div> <div>Cost Performance</div>	Super Dry Punch (SDP)	★★★★★	★★★★★	★★★	★★★
	Conic Long life Punch (CLP)	★★★★	★★★★★	★★★★★	★★★★★
	Conic Hard Punch (CHP)	★★★	★★★★★	★★★★★	★★★★★
	HSS	★★	★★★	★★★	★★★
	D2	★	★	★★	★


# **VARIATION OF CONIC AMADA TYPE TOOL**

## **ORIGINAL STYLE (NON AIR BLOW TYPE)**


1/2" (A)




1-1/4" (B)




2" (C)

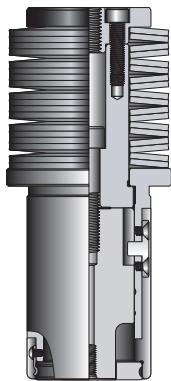

3-1/2" (D)

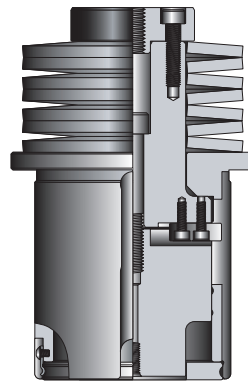


4-1/2" (E)

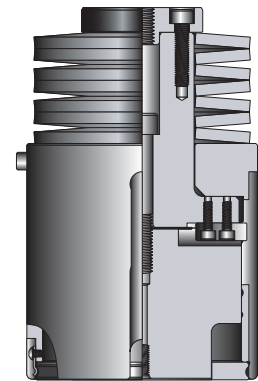


## **OMP (AIR BLOW TYPE)**


1/2" (A)




1-1/4" (B)




2" (C)

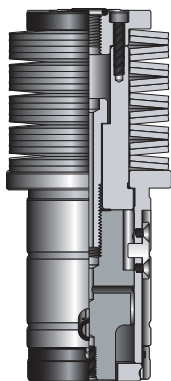

3-1/2" (D)

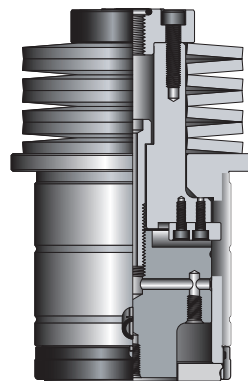


4-1/2" (E)

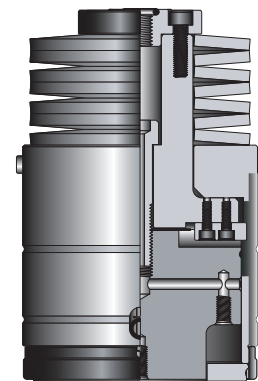


## **PROTECH SERIES ( AIR BLOW SYSTEM INCLUDED )**


1/2" (A)




1-1/4" (B)




2" (C)

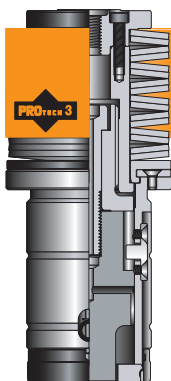

3-1/2" (D)

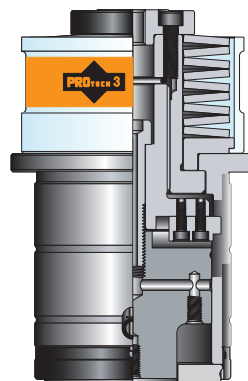


4-1/2" (E)

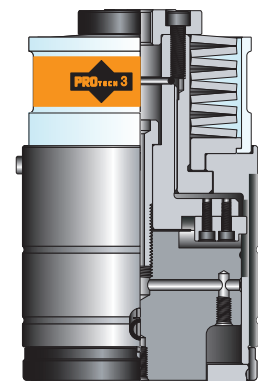

# 1/2"(A) STATION TOOLING

1/2 in  
(A)

Diameters Up to 12.7mm

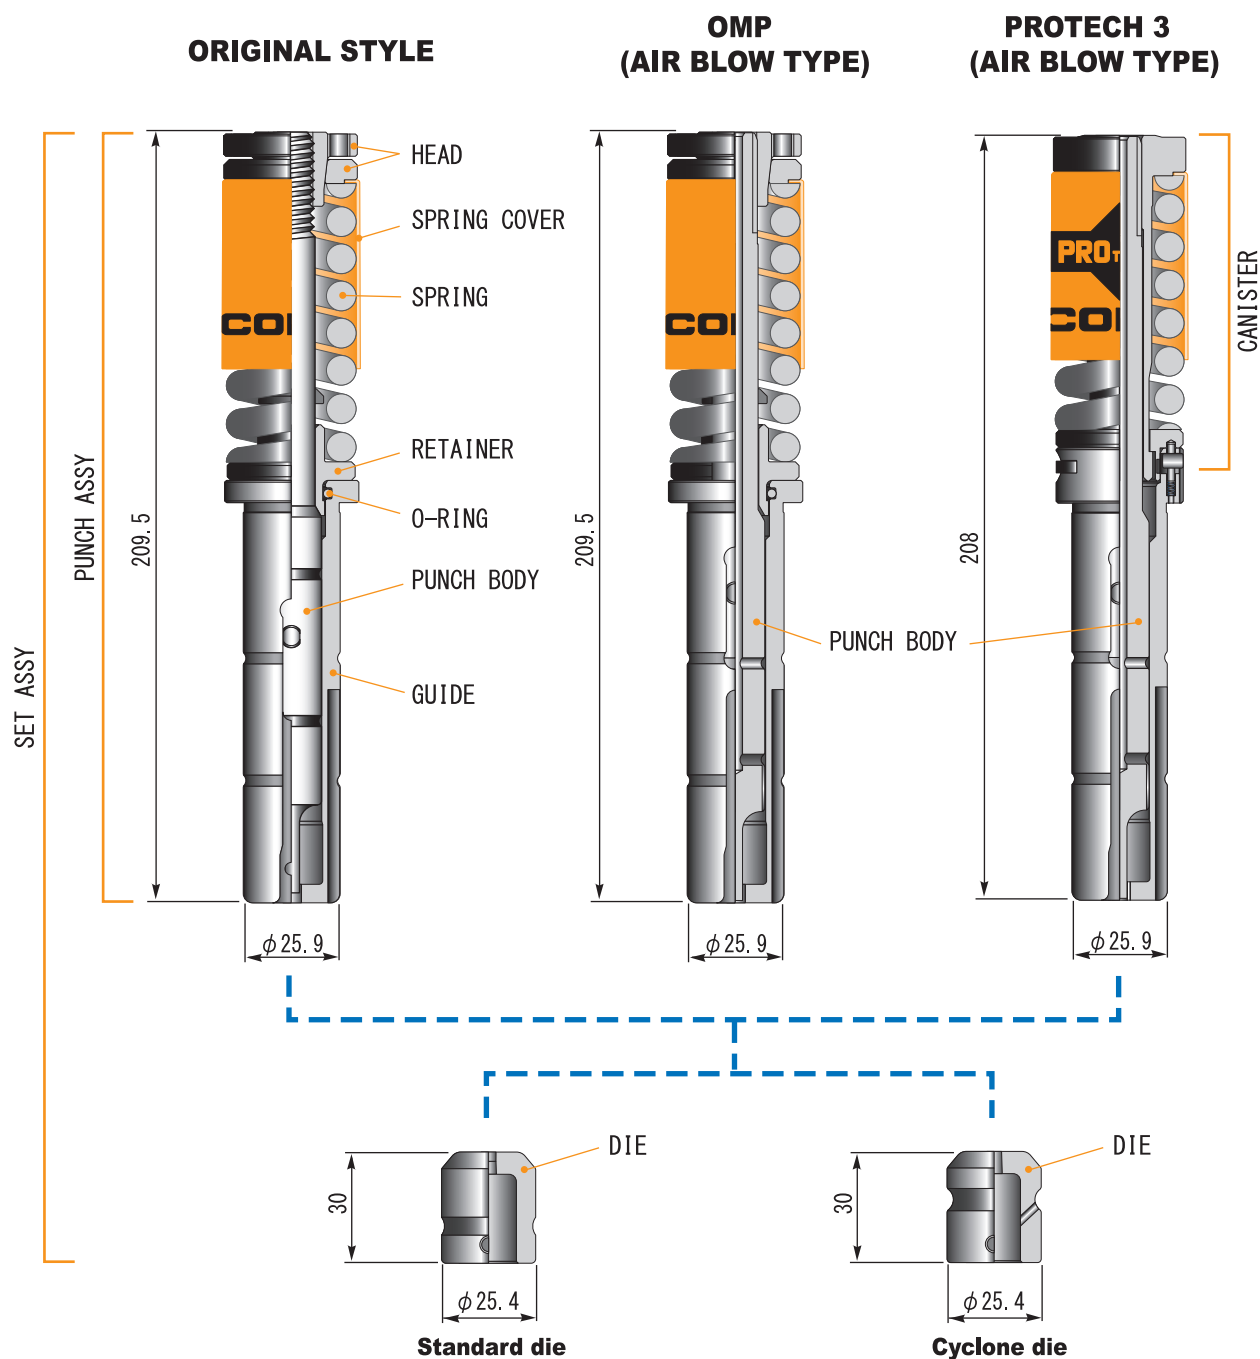


# 1-1/4"(B) STATION TOOLING

**1 1/4" in  
(B)**

**ORIGINAL STYLE : Diameters 12.71mm ~ 31.7mm**

**OMP / PROTECH 3 : Diameters 12.71mm ~ 30mm**

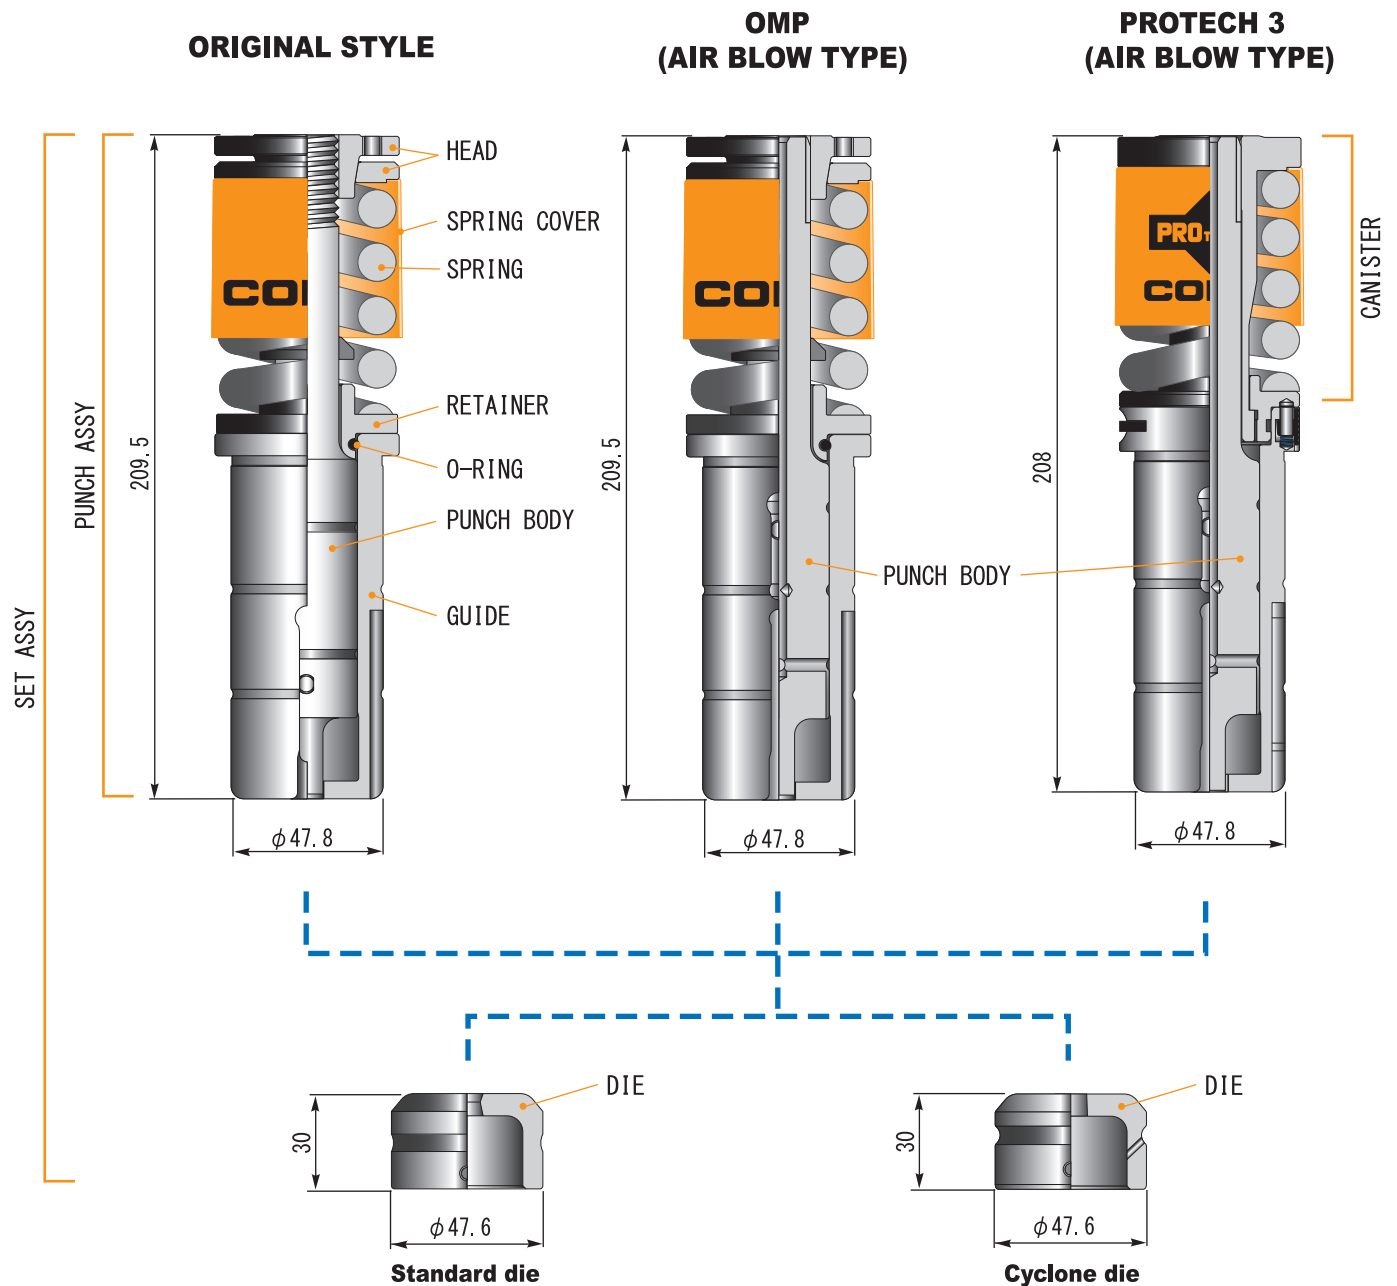




# 2"(C) STATION TOOLING

2 in  
(C)


**ORIGINAL STYLE : Diameters 31.71mm ~ 50.8mm**

**OMP / PROTECH 3 : Diameters 30.01mm ~ 47mm**


## ORIGINAL STYLE

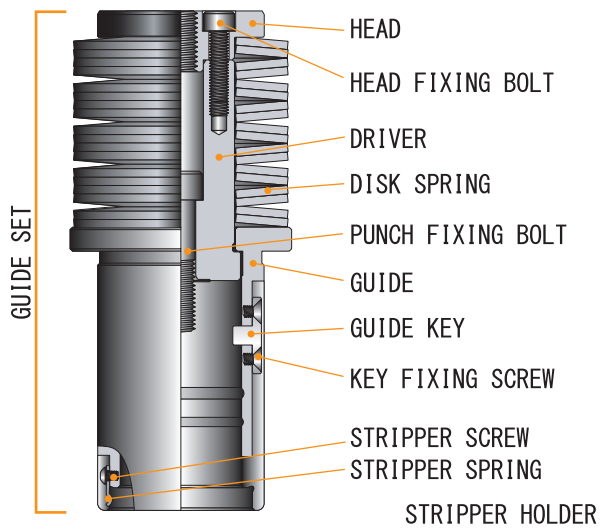


PUNCH FIXING BOLT M12

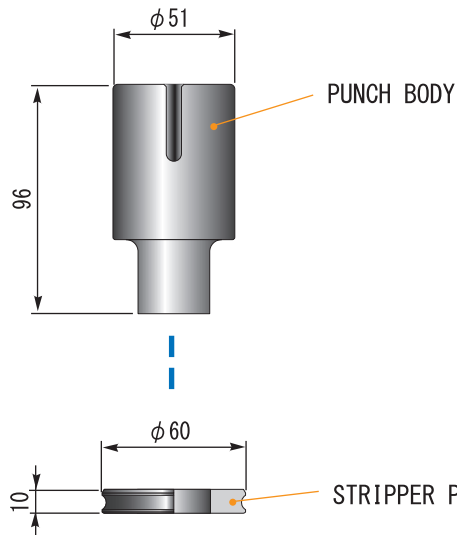



## OMP (AIR BLOW TYPE)

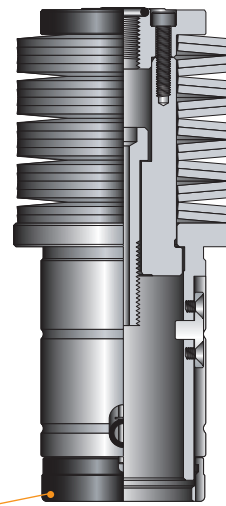

PUNCH FIXING BOLT M14

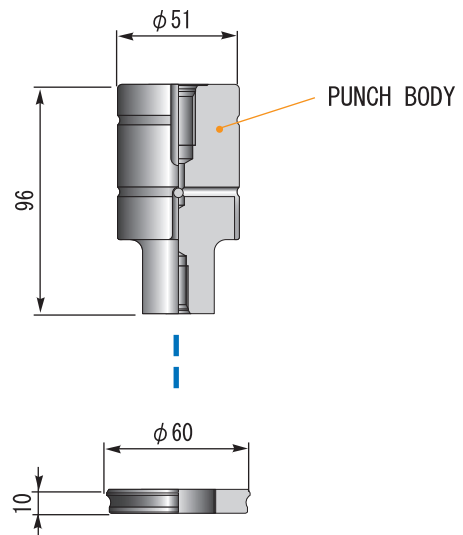

## PROTECH 3 (AIR BLOW TYPE)

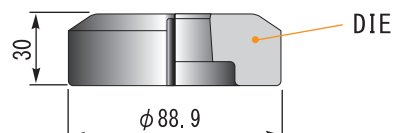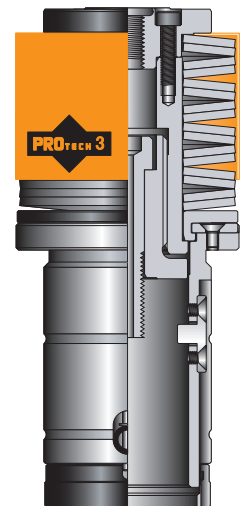


# 3-1/2"(D) STATION TOOLING

**3 1/2" in  
(D)**


**ORIGINAL STYLE : Diameters 50.81mm ~ 88.9mm**

**OMP / PROTECH 3 : Diameters 47.01mm ~ 85.6mm**


## ORIGINAL STYLE

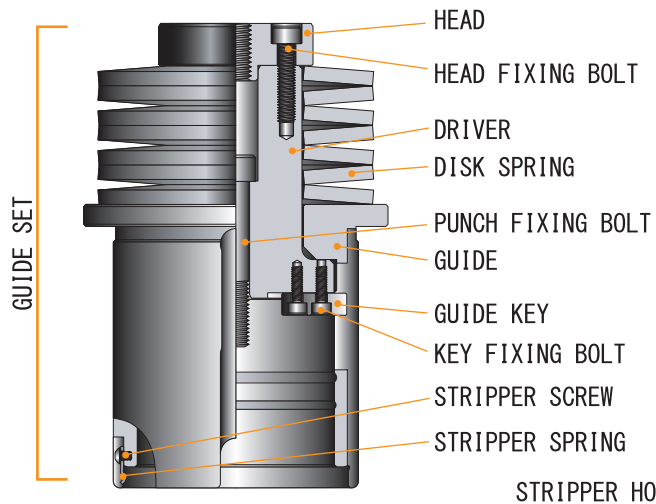


## OMP (AIR BLOW TYPE)

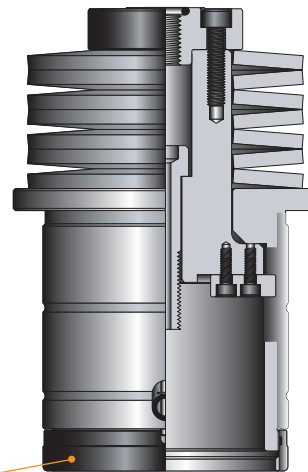



## PROTECH 3 (AIR BLOW TYPE)

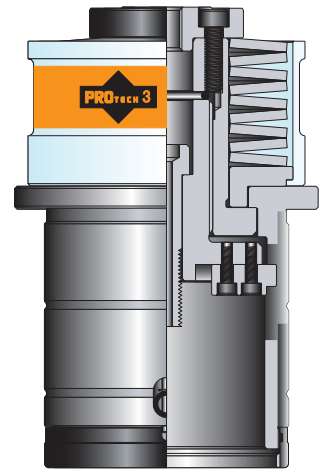

PUNCH FIXING BOLT M12

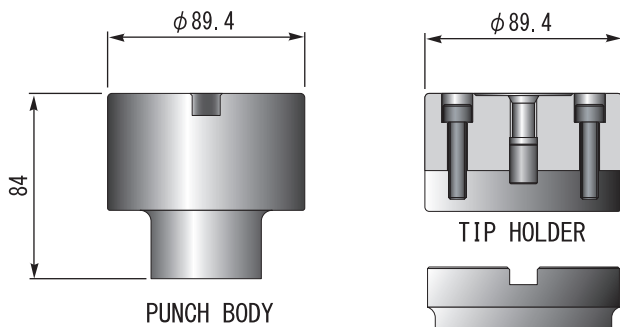

PUNCH FIXING BOLT M14

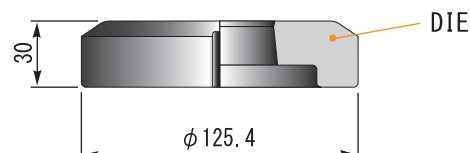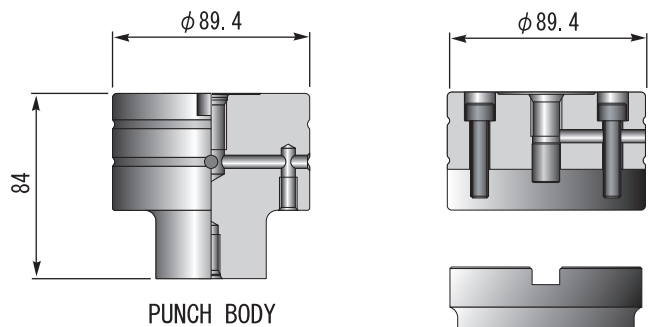


# 4-1/2"(E) STATION TOOLING

**4 1/2" in  
(E)**

**ORIGINAL STYLE : Diameters 88.91mm ~ 114.3mm**


**OMP / PROTECH 3 : Diameters 85.61mm ~ 110.5mm**

## ORIGINAL STYLE

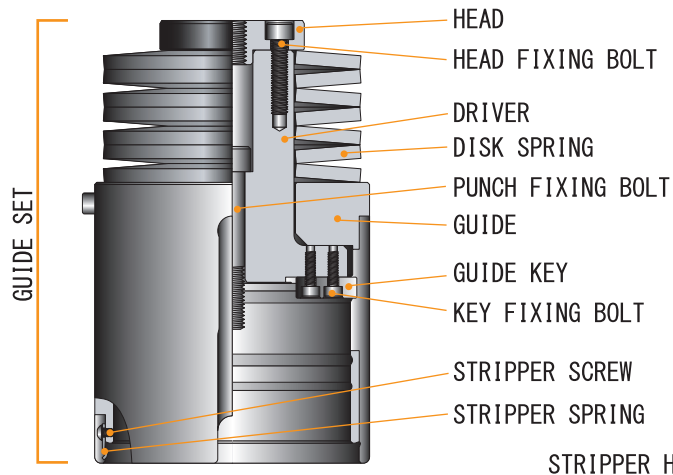


STRIPPER HOLDER

## OMP (AIR BLOW TYPE)





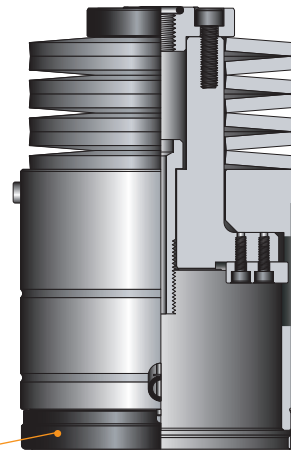


## PROTECH 3 (AIR BLOW TYPE)

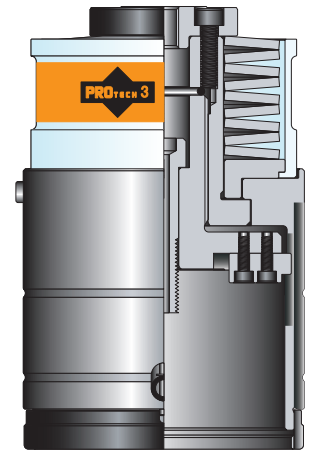



PUNCH FIXING BOLT M12

PUNCH FIXING BOLT M14

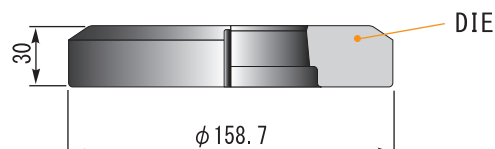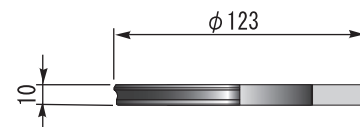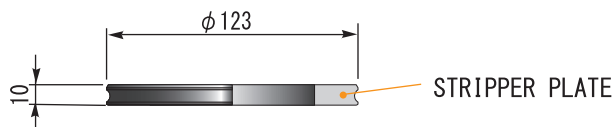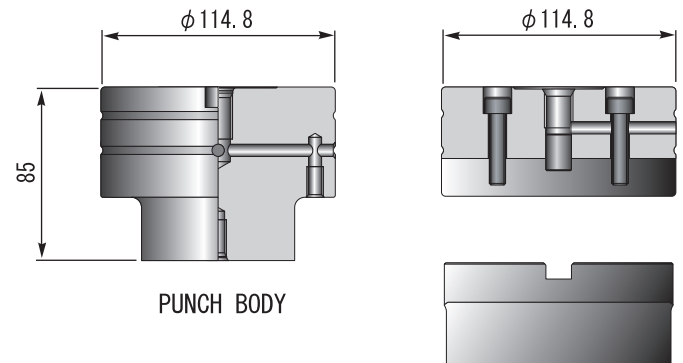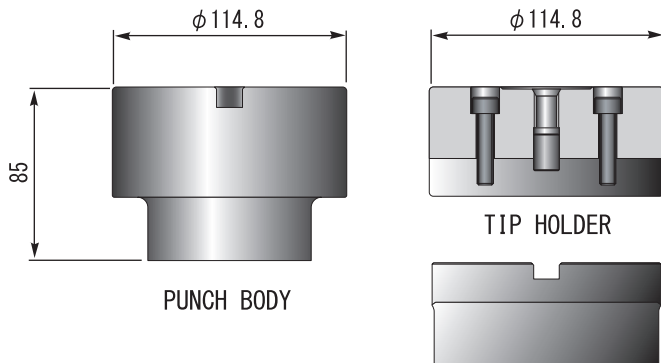

# NESTING TOOL (ORIGINAL STYLE, OMP, PROTECH 3)

Special tool for punching more close position to clamp.

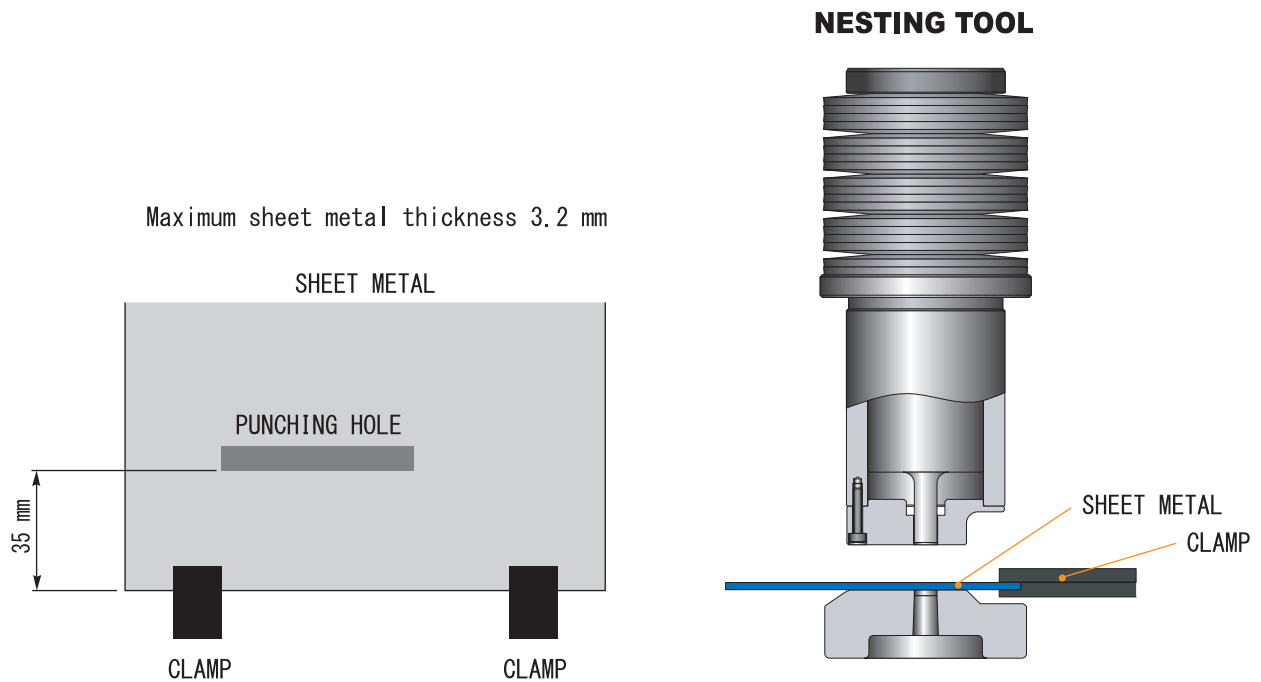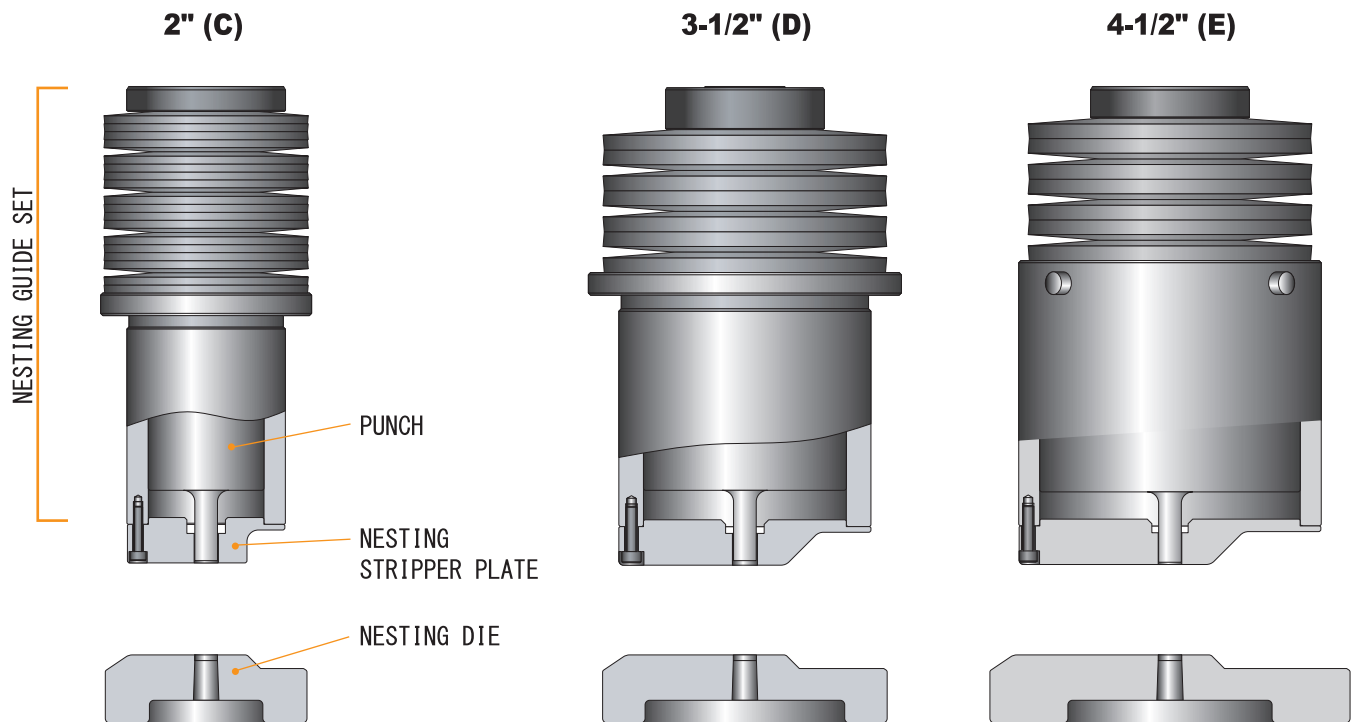





# UT-Type / HP-Type / MULTI TOOLING

■ **UT-Type Tooling** – Compatible with MATE Ultra Tec type tooling

■ **1/2" (A)**

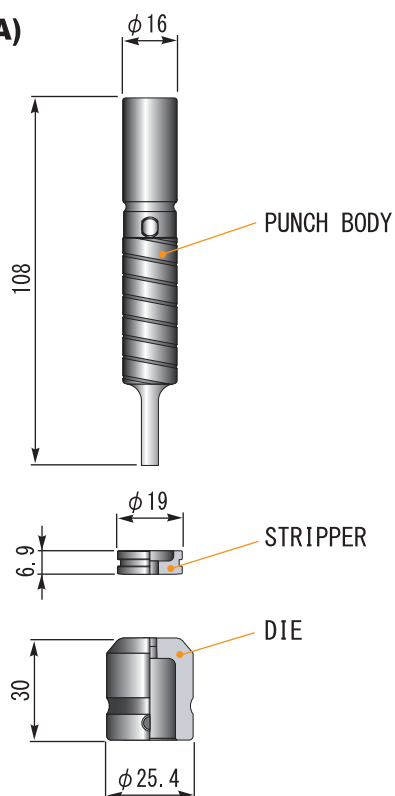


■ **1-1/4" (B)**

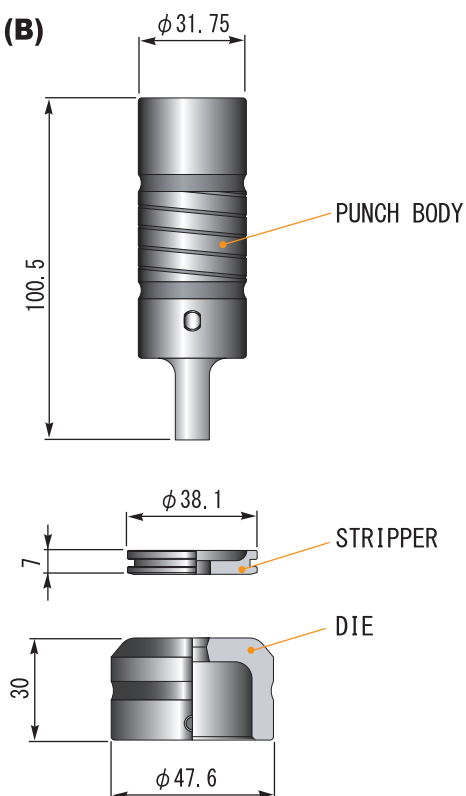


■ **HP-Type Tooling** – Compatible with Wilson Tool HP type tooling

■ **1/2" (A)**

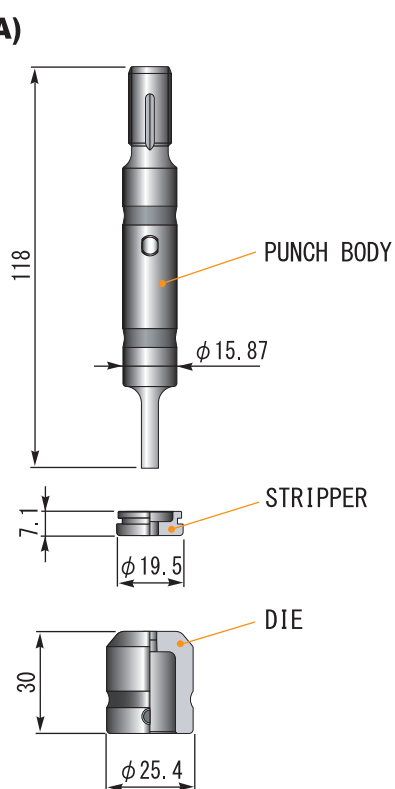

■ **1-1/4" (B)**

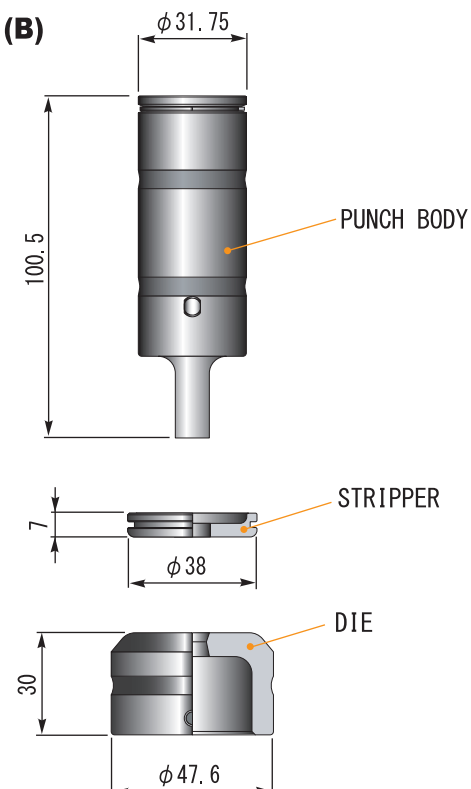


■ **Multi Tool** – Various kind of multi tool (Murata, Mate, Wilson tool) will be available. Please contact Conic tool sales desk.

### ADAPTERS


**1/2"(A) Tool → 1-1/4"(B) Station**

Original style (Non air blow type)

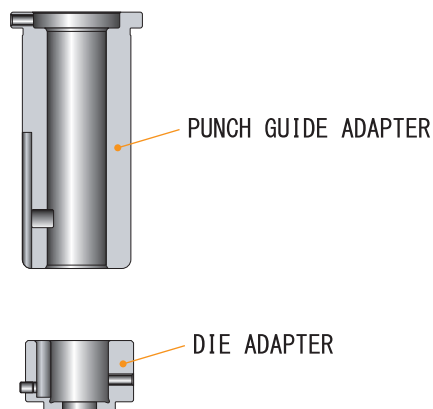

**1-1/4"(B) Tool → 3-1/2"(D) Station**

Original style (Non air blow type)

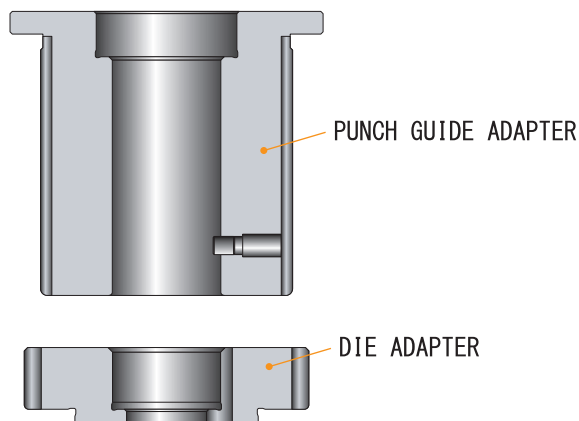

### PUNCH SHIM , DIE SHIM

**1/2"(A)**


**1-1/4"(B)**

**2"(C)**


**3-1/2"(D)**

**4-1/2"(E)**

**PUNCH  
SHIM**

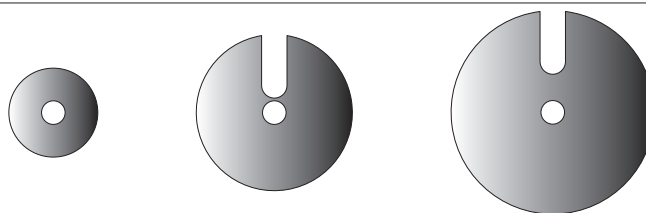

**DIE SHIM**

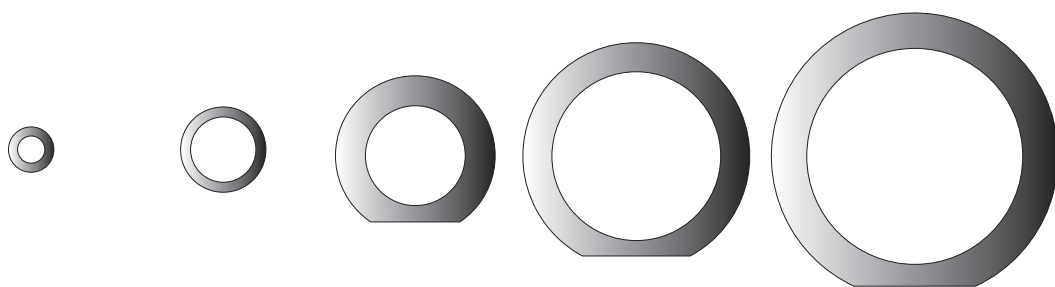

Remark : Shim set = 0.5mm, 1.0mm x 2, 1.5mm, 2mm Total 5 pieces


### BRUSH DIE

Placing these "Brush Die" into the vacant stations to avoid the damage of sheet metal.

**1/2"(A)**

**1-1/4"(B)**

**2"(C)**

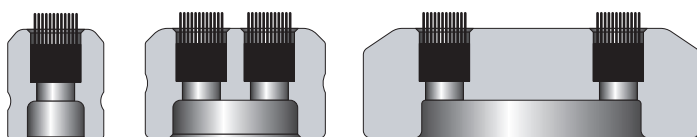

For station 3-1/2" (D) and 4-1/2" (E) also available.


### TURRET ALIGNMENT JIG

(For Amada machine)



Your favorite punch press machine in the best condition at regular turret centering work.


## [ Parts name ]

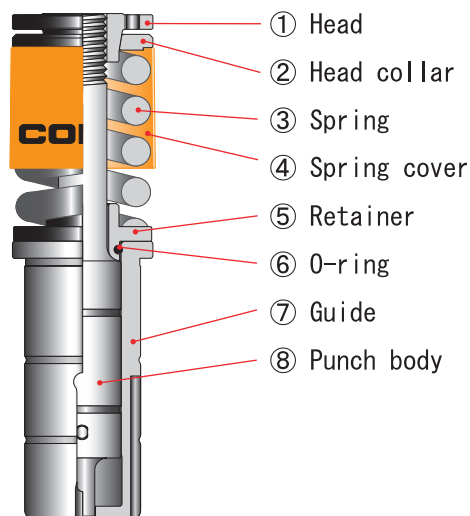

## [ Check points ]

- ① Please follow the machine instruction manual before use punching tools.
- ② Please check there are no cracks or seizes. If you find such abnormal conditions, do not use the tools.
- ③ Machine turrets tables, die holders also should be kept clean.  
(ex: Slugs in die holders can cause a serious damage on the tools)
- ④ Cutting edge of the tooling must be sharpened when it is dull.

## [ How to remove punch body ]

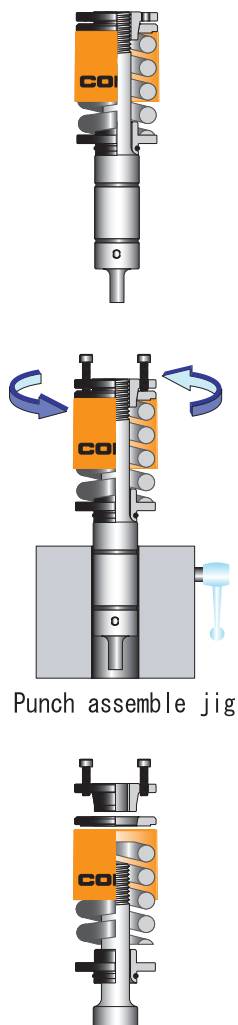


- ① Remove guide.
- ② Set punch body to punch assembly jig on the machine.
- ③ Insert 2 screws to the punch head's screw holes.

Cap screws are recommended.


1/2"	M 5
1-1/4"	M 6

- ④ Tight screws evenly until distance between head and head collar becomes 5mm.
- ⑤ Unscrew head with belt wrench to unscrew the head.  
(It is also possible to use a bar between two screws and turn CCW(counter clock wise))
- ⑥ Remove head , head collar, spring, spring cover, retainer.

Punch assemble jig

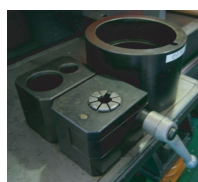

## [ How to assemble punch body ]

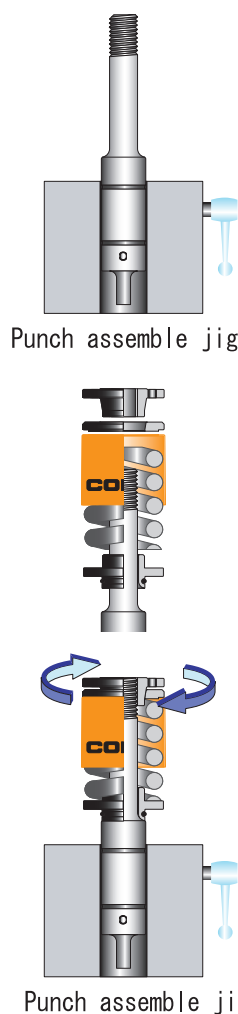


- ① Set punch body to punch assembly jig on the machine.
- ② Set retainer, spring, spring cover, head collar, head sequentially to the punch body.
- ③ Turn the head unit CW(clock wise) until punch height becomes correct length. (207.5mm)
- ④ Put the grease on the half bottom part of punch body for lubrication.  
We recommend "Mori Paste" which is available from CONIC.
- ⑤ Insert guide.

### CAUTION

When assembling/disassembling punch body, we recommend to use soft metal or rugs to prevent scratches on the punch body.

# INSTRUCTION MANUAL (PROTECH 3)

## ***SAFETY, ACCURATELY and SPEEDY - PROTECH 3***

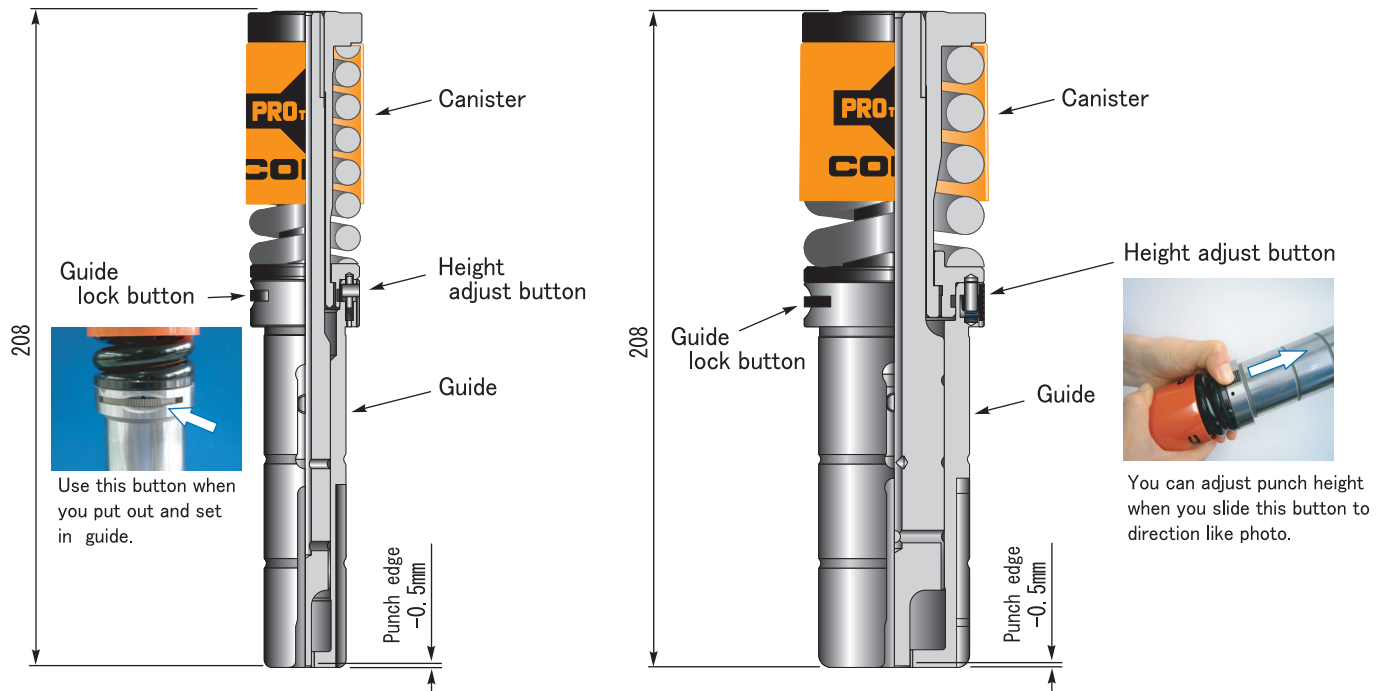

### How to adjust punch height



- 1.** Slide punch height adjust button to punch edge direction. Turn the canister during pushing the button.



Punch edge out ... Turn canister to c.c.w.



Punch edge in ... Turn canister to cw.

- 2.** Set the punch edge to same surface position as guide stripping surface.

- 3.** Punch height adjusting by 3 clicks.

- ① During sliding height adjust button to guide direction.
- ② Release height adjust button as soon as starting to turn canister to right direction.
- ③ One click is approximately 0.2mm in case of turning canister till automatic locked position.
- ④ In case you repeat this work 3 times (3 clicks), punch height will be adjusted in standard dimension.



# INSTRUCTION MANUAL (PROTECH 3)

## Easy & Quick operation

### How to disassemble



- 1.** Slide guide lock button to side direction of the guide.



- 2.** Pull out guide while sliding the guide lock button.



- 3.** Turn the punch body out from the canister.

### How to assemble



- 1.** Put the punch body into canister. Then turn the punch body till punch screw comes to head parts.



- 2.** Insert punch body into guide after matching punch key and guide key.



- 3.** By sliding the guide lock button, insert guide till guide flange touch to the canister.



- 4.** When release the guide lock button, guide is locked automatically.






- 5.** Confirm if guide and canister are locked.

# VARIATION OF CONIC MURATA TYPE TOOL




## TOOLING STYLE 114

Use urethane stripper on this tools.




PUNCH

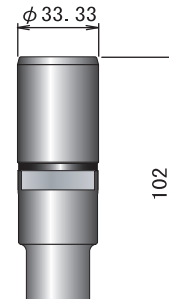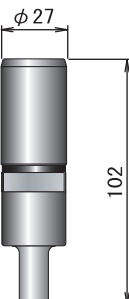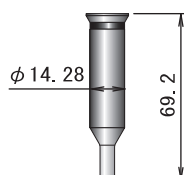




DIE

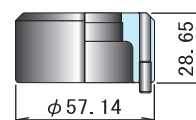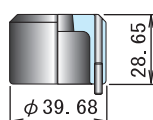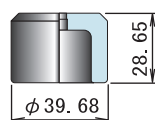




PUNCH

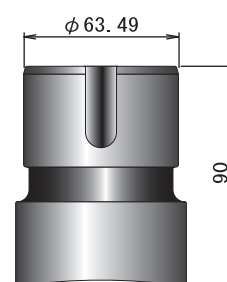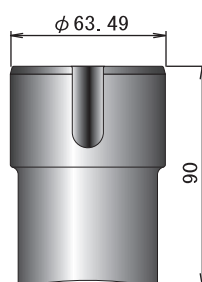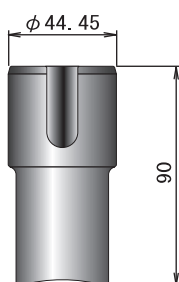




DIE



PUNCH

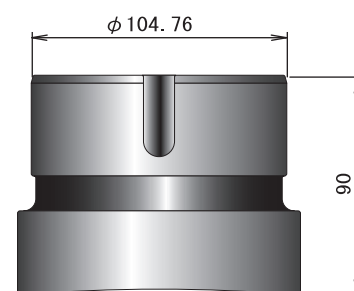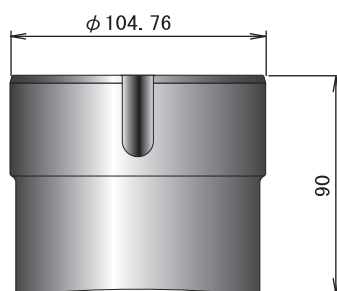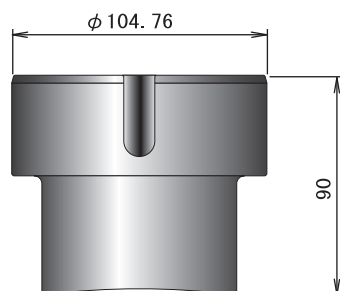














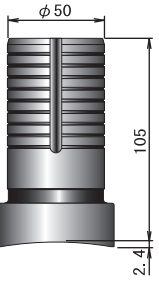
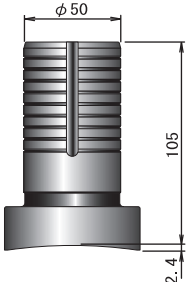






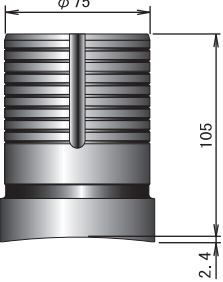
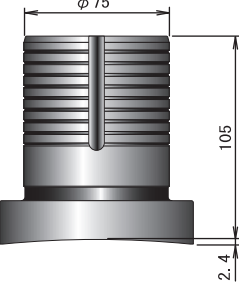
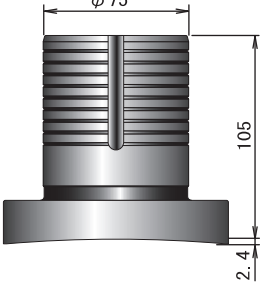






DIE

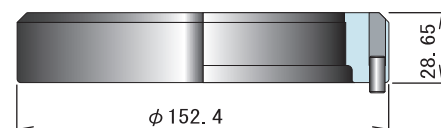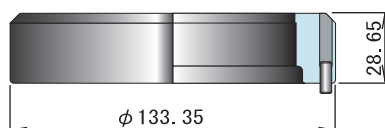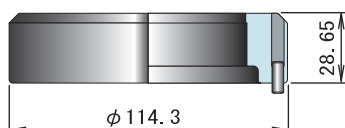

# VARIATION OF CONIC MURATA TYPE TOOL

## VULCAN TOOL

This tool uses metal stripper.


	<b>X</b>	<b>A</b>	<b>B</b>	<b>C</b>
<b>PUNCH</b>				
<b>STRIPPER</b>				
<b>DIE</b>				
	<b>D</b>	<b>E</b>	<b>F</b>	
<b>PUNCH</b>				
<b>STRIPPER</b>				
<b>DIE</b>				
	<b>G</b>	<b>H</b>	<b>J</b>	
<b>PUNCH</b>				
<b>STRIPPER</b>				
<b>DIE</b>				

# X / A / B STATION TOOLING

**X**

Diameters Up to 12.7mm


**VULCAN TOOL**

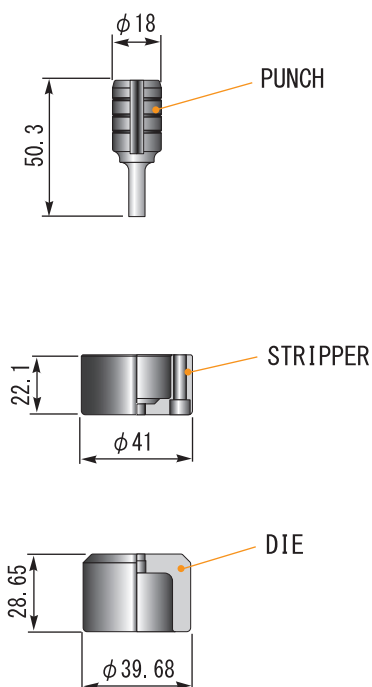


**A**

Diameters Up to 12.7mm

**STYLE 114**

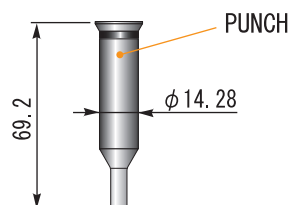


**VULCAN TOOL**

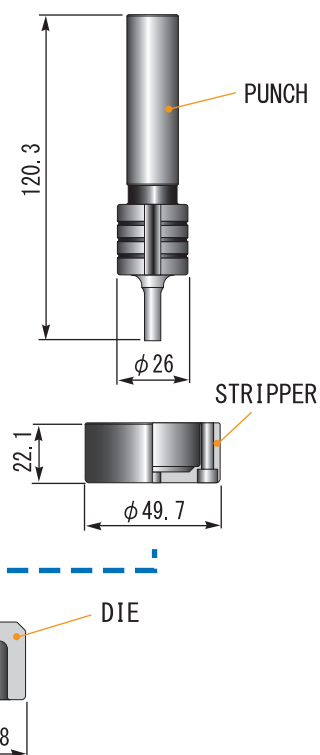


**B**

Diameters 12.71mm ~ 25mm

**STYLE 114**

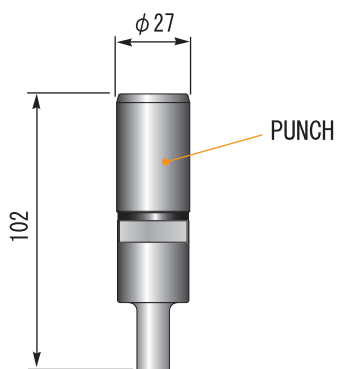

**VULCAN TOOL**

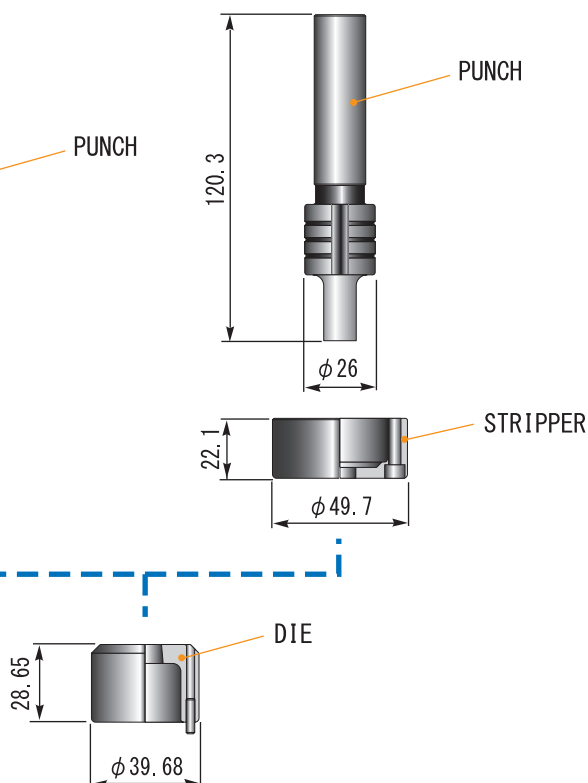




# C / D STATION TOOLING





Diameters 25.01mm ~ 38mm

STYLE 114

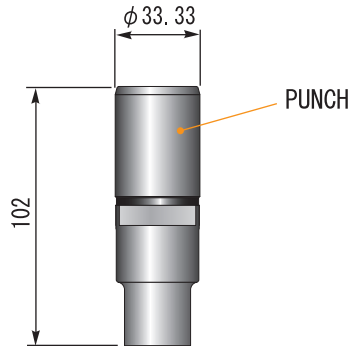


VULCAN TOOL

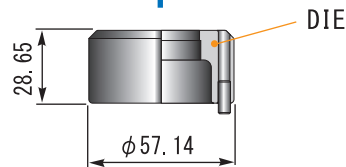
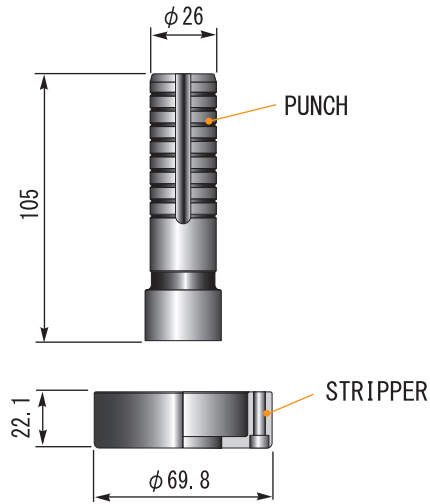


Diameters 38.01mm ~ 50mm

STYLE 114

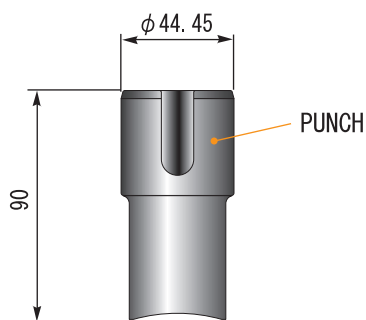

VULCAN TOOL

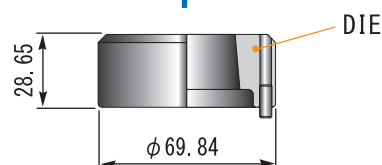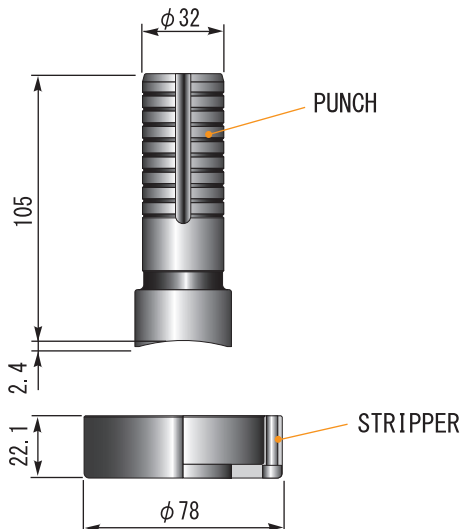


# E / F STATION TOOLING






Diameters 50.01mm ~ 64mm

STYLE 114

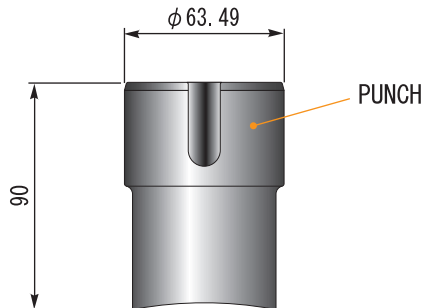


VULCAN TOOL


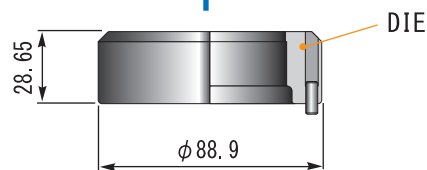
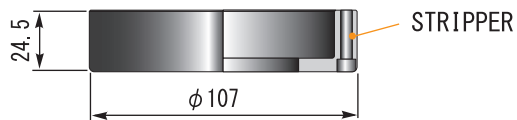
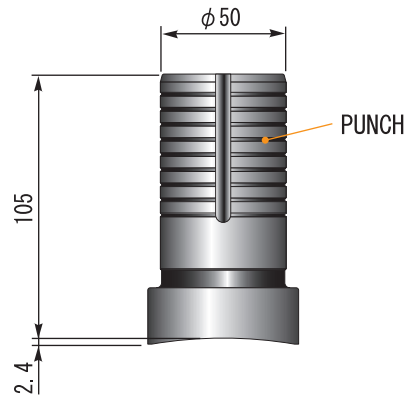


Diameters 64.01mm ~ 75mm

STYLE 114

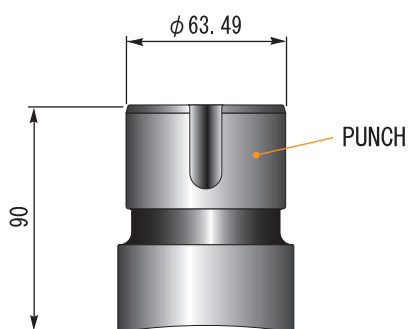

VULCAN TOOL

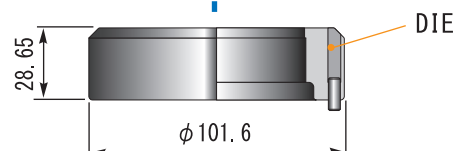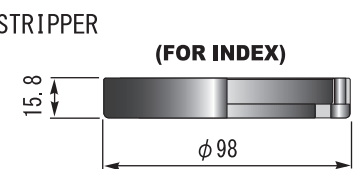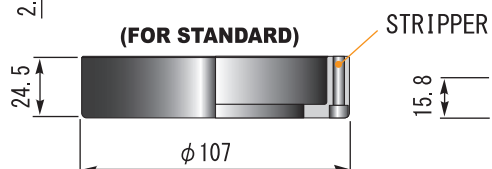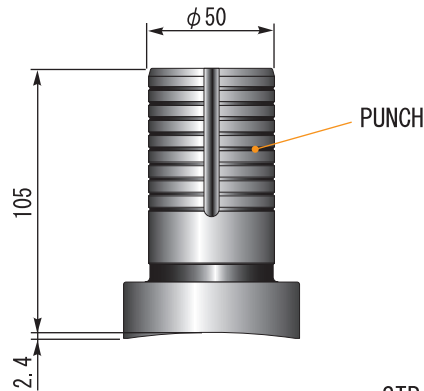


# G / H STATION TOOLING





Diameters 75.01mm ~ 89mm

STYLE 114

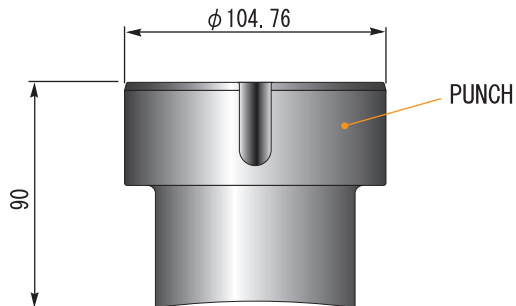


VULCAN TOOL

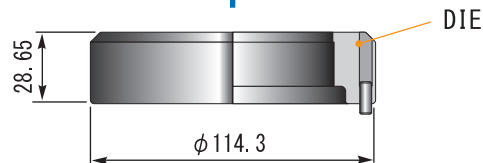
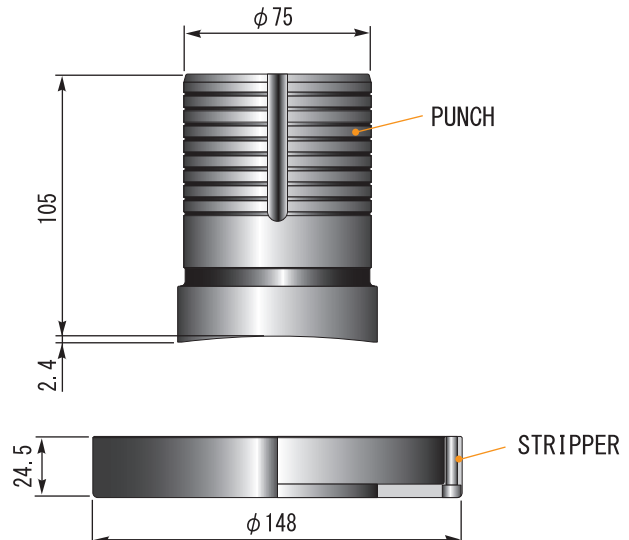


Diameters 89.01mm ~ 105mm

STYLE 114

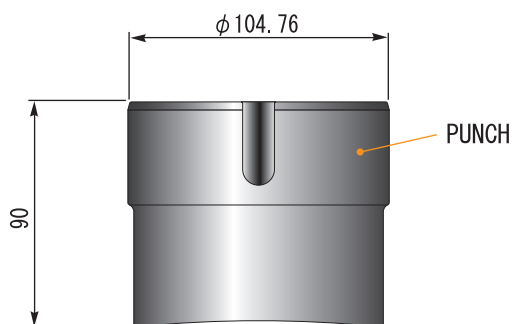

VULCAN TOOL

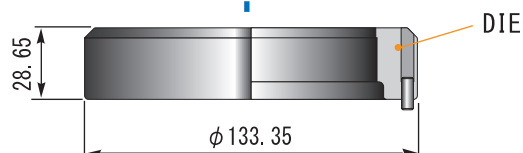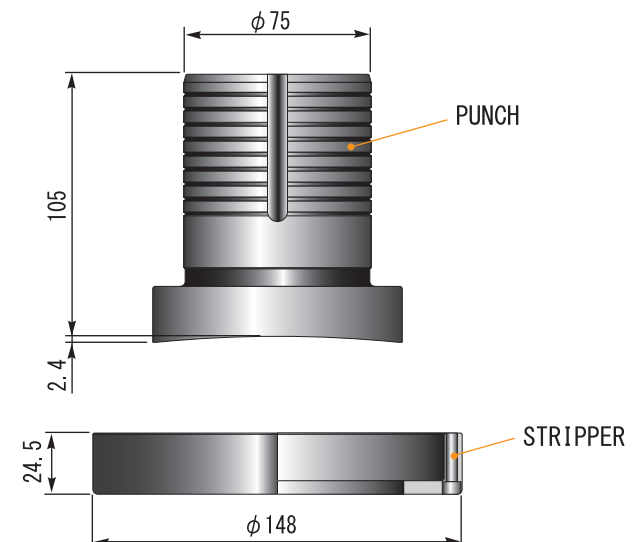


# J STATION TOOLING / HOLDER




Diameters 105.01mm ~ 120mm


STYLE 114

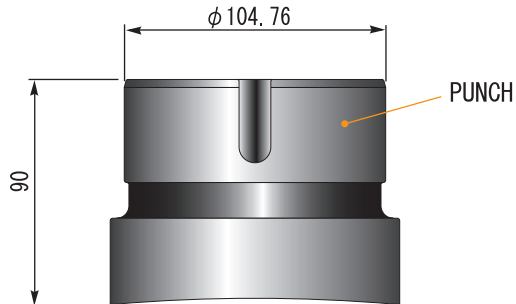


VULCAN TOOL

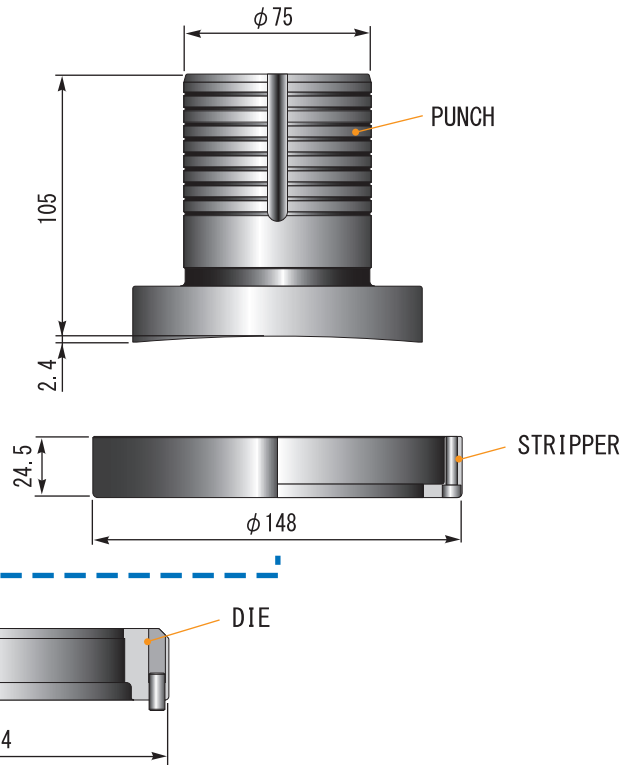

TOOLING STYLE 114

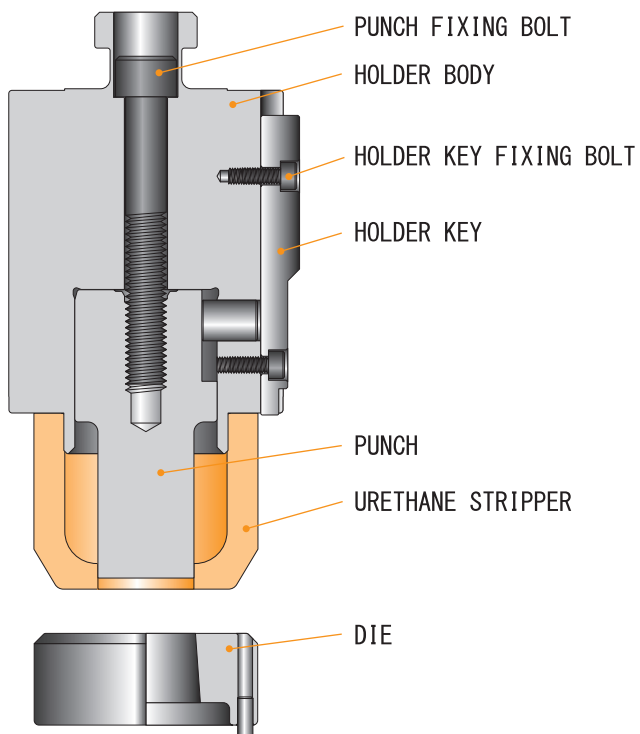

VULCAN TOOL

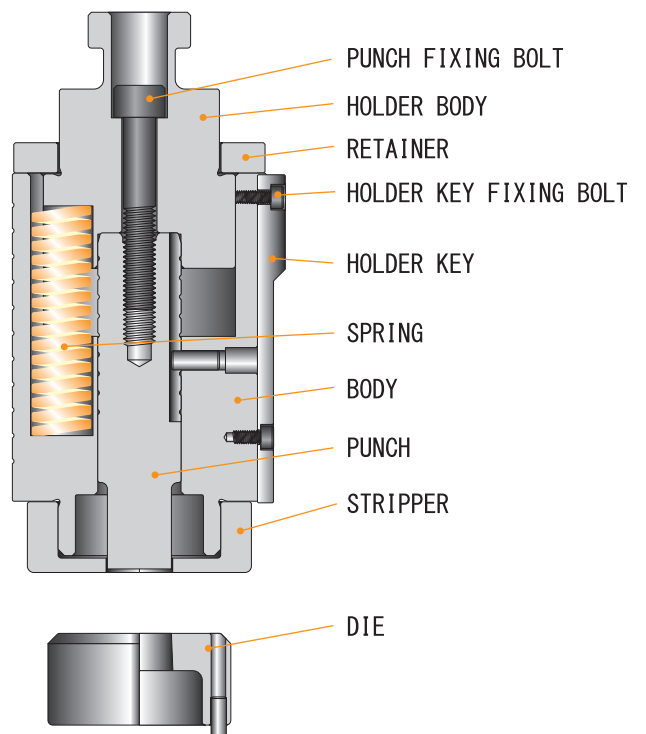

Widest variety special forming tools in advanced technology.

## Conic Special tools

Conic offers the best performance special tools to the customer.




Conic engineers always try to find the best solution of productive tools to the customer which uses the most advanced tooling technologies.



### CENTER POINT




FORMING UP  
NC 1-1/4" (B)

FORMING DOWN  
NC 1/2" (A)

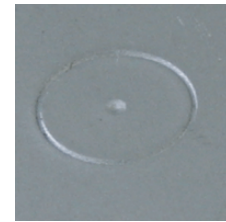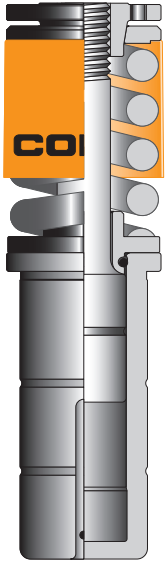

FORMING UP

FORMING DOWN


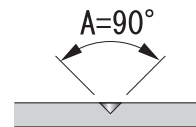
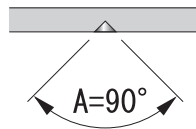


Forming process of making conical recess (center point).  
Used for locator, landmark and so on.

### BURRING FOR THREAD FORM



FORMING UP  
NC 1-1/4" (B)  
(Forming after pre-piercing)

FORMING DOWN  
NC 1-1/4" (B)  
(Pre-piercing and forming)

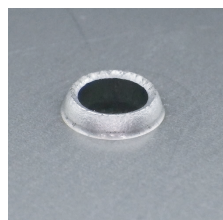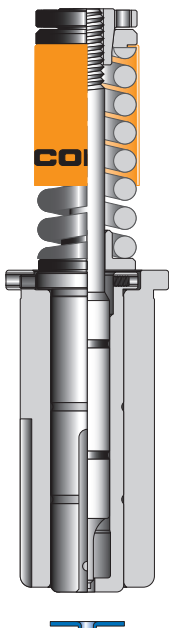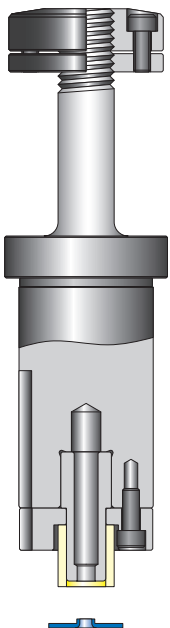

FORMING UP

FORMING DOWN

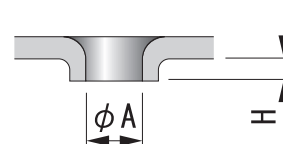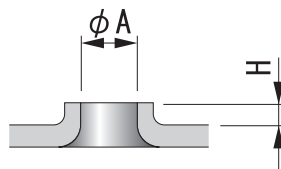


Screw size	Diameter (A)	Pre-hole
M2.5	φ 2.1	φ 1.2
M3	φ 2.6	φ 1.5
M4	φ 3.4	φ 2.0
M5	φ 4.3	φ 2.4
M6	φ 5.1	φ 2.8




Forming process for making tubes of threading for screw.  
Threading for screws and increased bearing area for tubes.

## HALF SHEAR


FORMING UP




FORMING DOWN

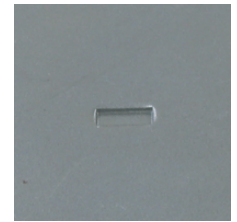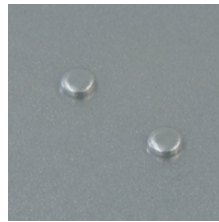

FORMING UP

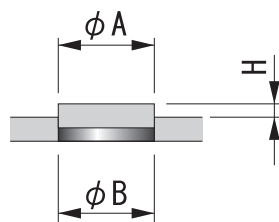


FORMING DOWN

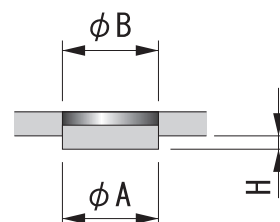


Forming process of pierce half of material thickness.  
Used for locator or stopper.

## EMBOSS (DIMPLE)


FORMING UP

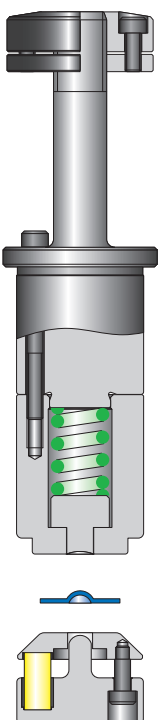


FORMING DOWN

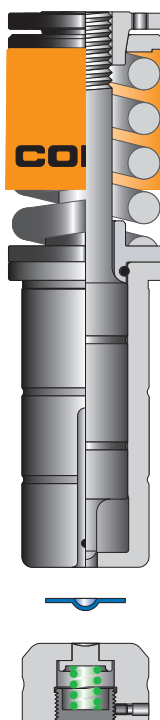

FORMING UP

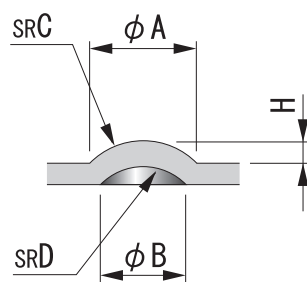





FORMING DOWN

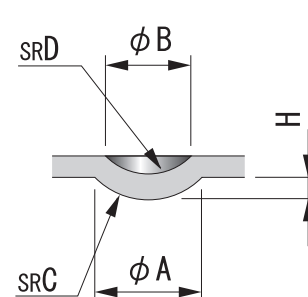

Forming process of embossing material like dimple.  
Used for locator or decorative pattern of the material.







**COUNTERSINK FOR COUNTERSUNK SCREW (CHAMFERING)**

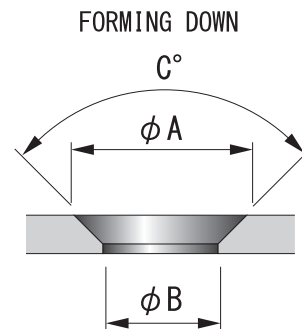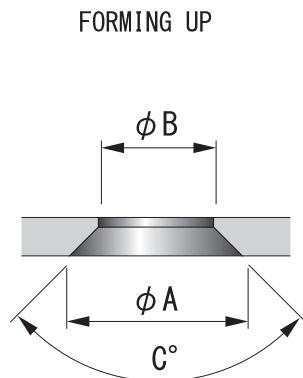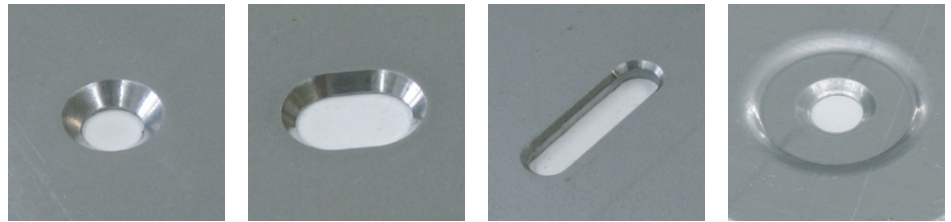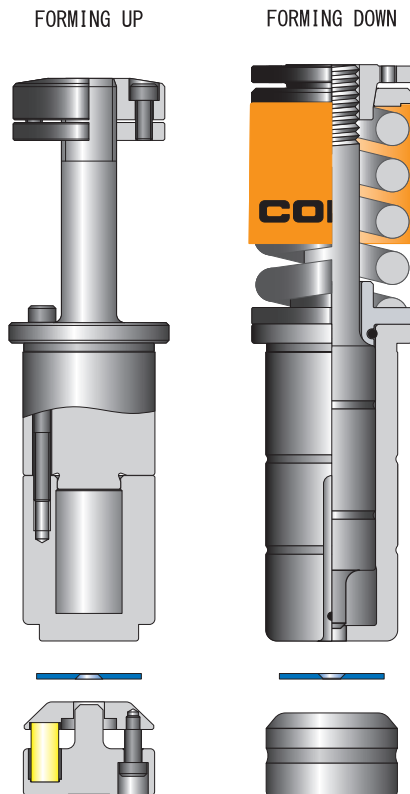

Forming process of making a chamfer to material.

Used for sink a countersunk screw head, make chamfer to a corner after punching, guide of tapping.


**COUNTERSINK**

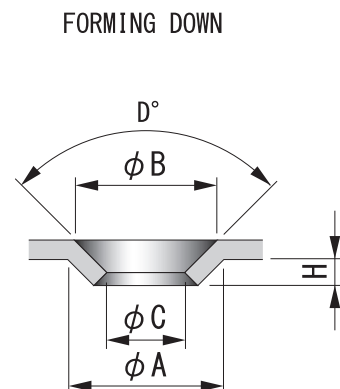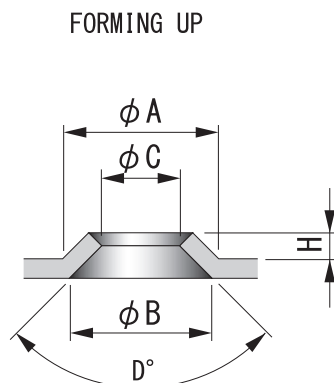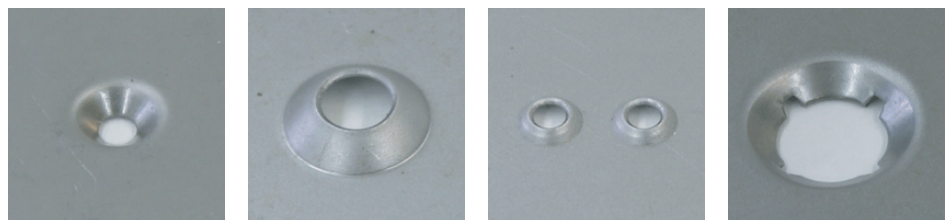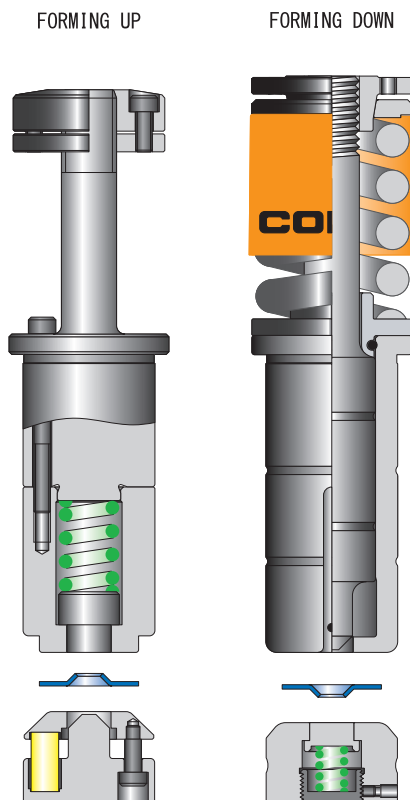


Forming process of embossing work, such as dish-shaped.

Used for sink a countersunk screw head, or used for nonslip.




**COUNTERSINK BARRING**

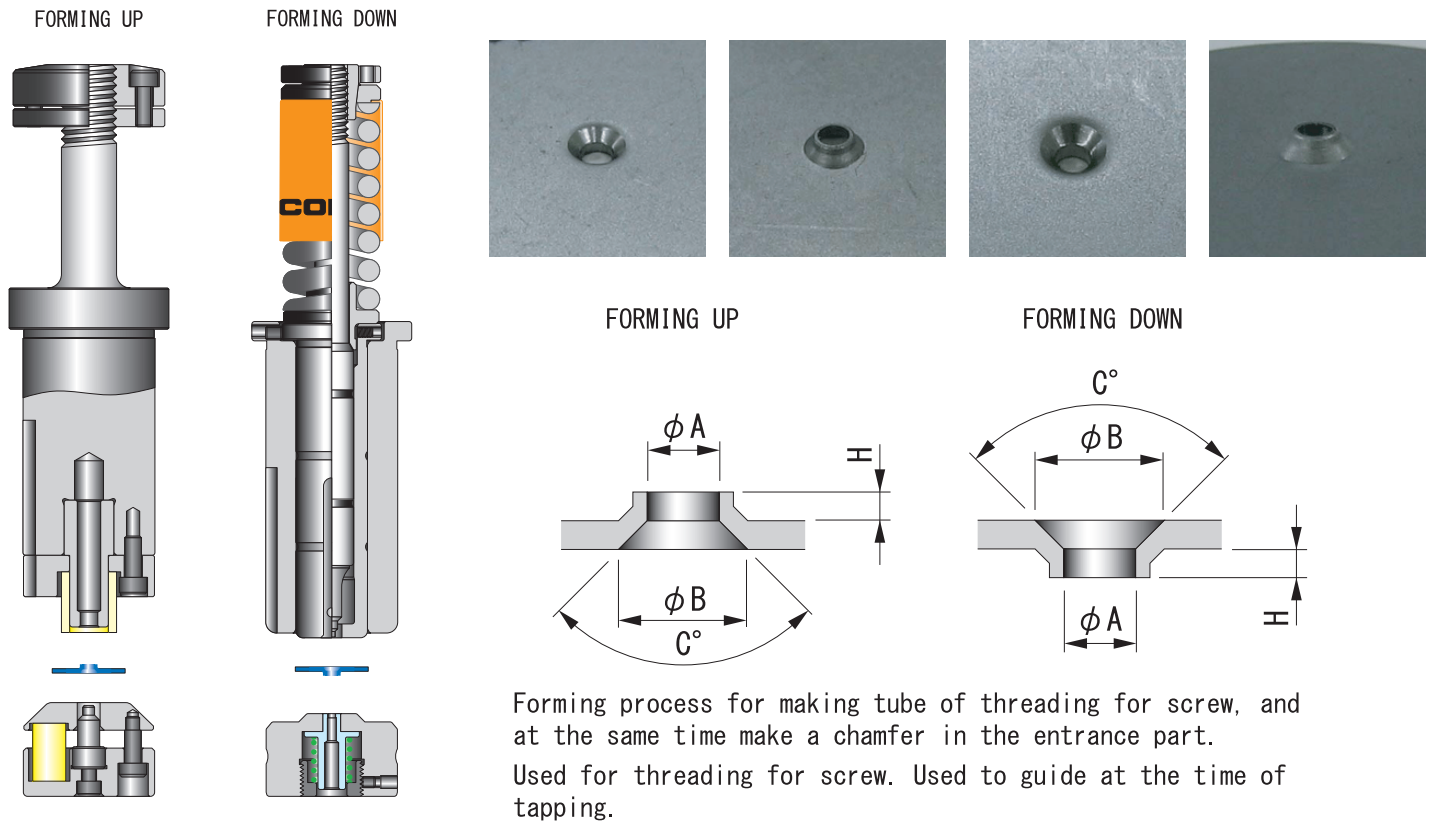

**ONE PITCH THREAD FORM**

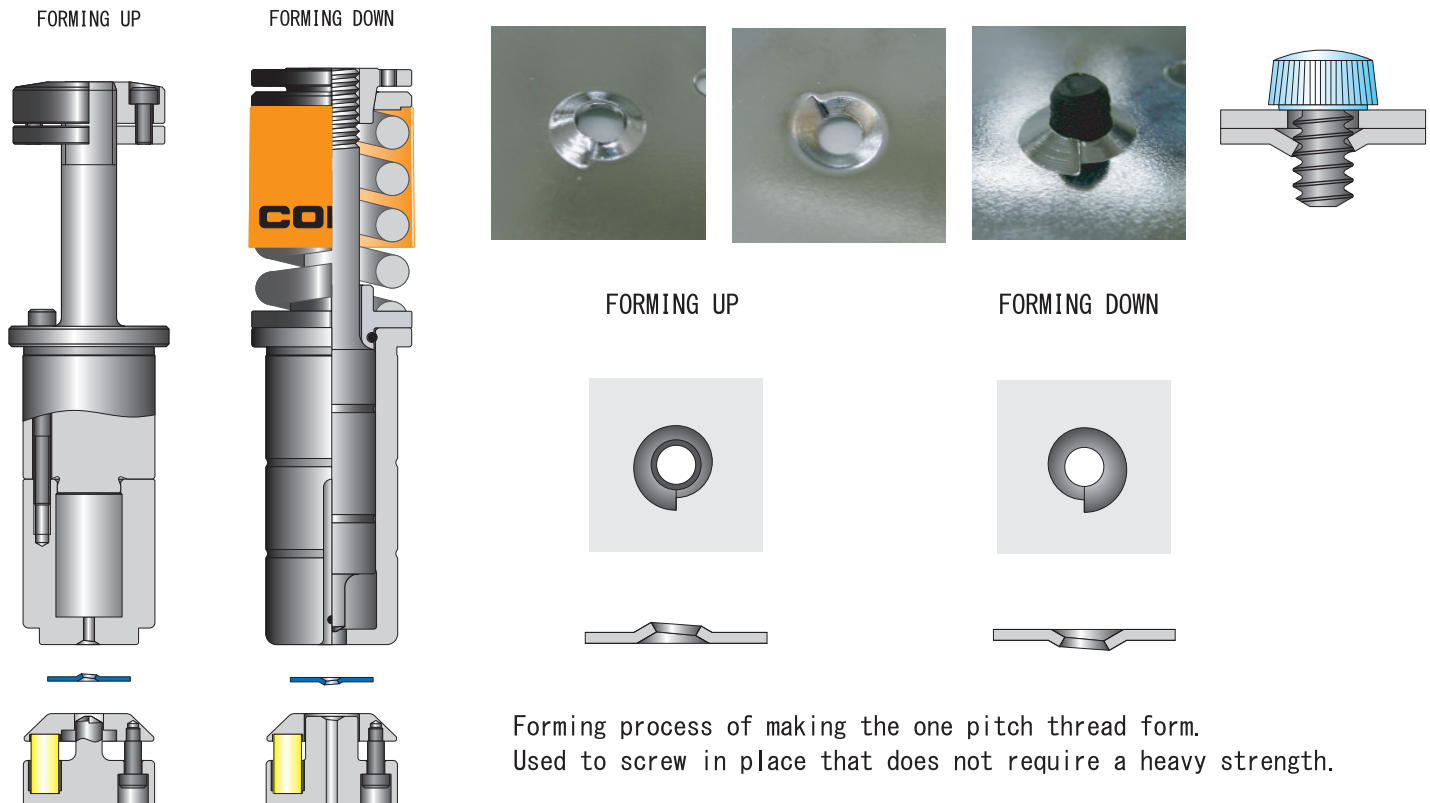

## COUNTERSINK BARRING

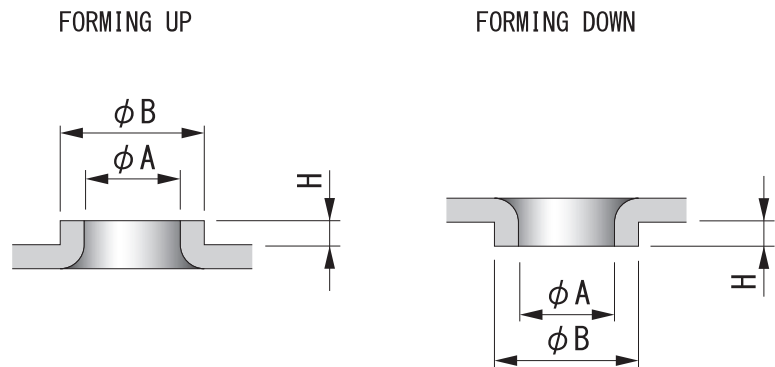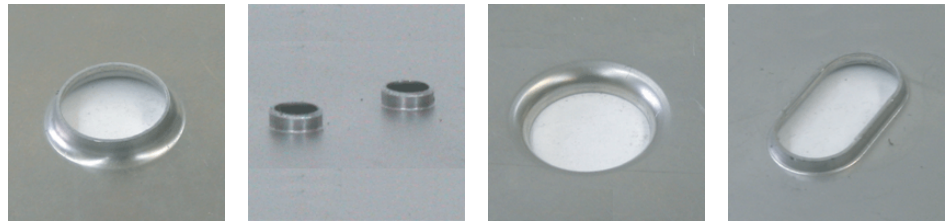
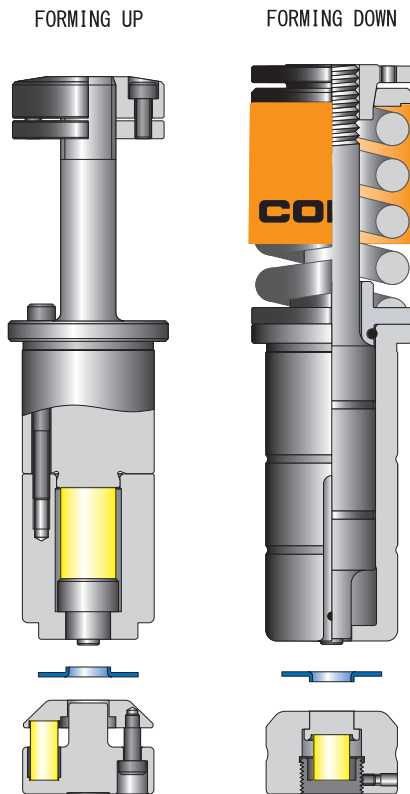


Forming process for making tubes.

Used to guide or protect the code and pipe.

## CURLING

FORMING DOWN


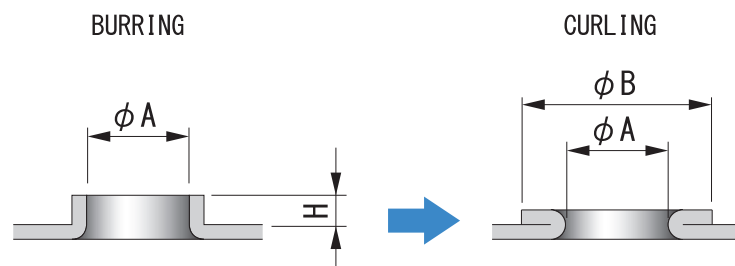
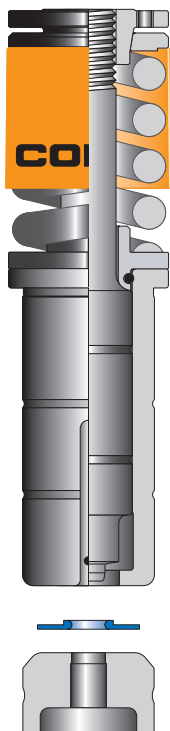


Forming process to bend the material after forming of burring.

Used to guide or protect the code and pipe.

The order of processing is Pre-hole  $\Rightarrow$  Burring  $\Rightarrow$  Curling.




**EMBOSS**

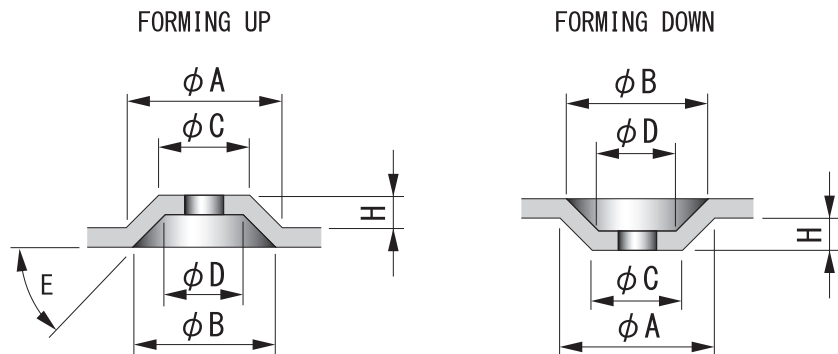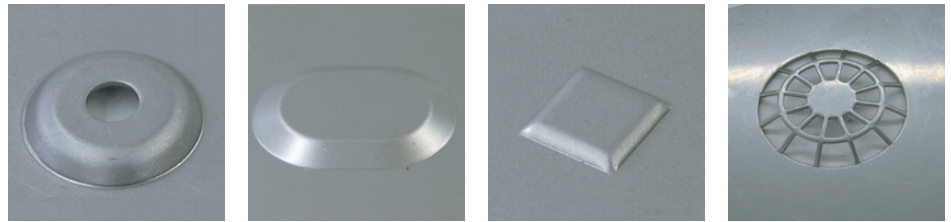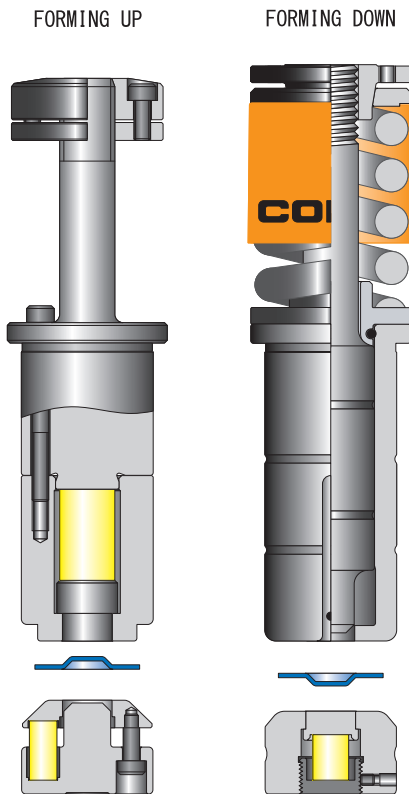

Forming process to produce raised or sunken shape.

Used for sinking a head of bolts or nuts.  
Used for the seat of the product.



**KNOCKOUT**

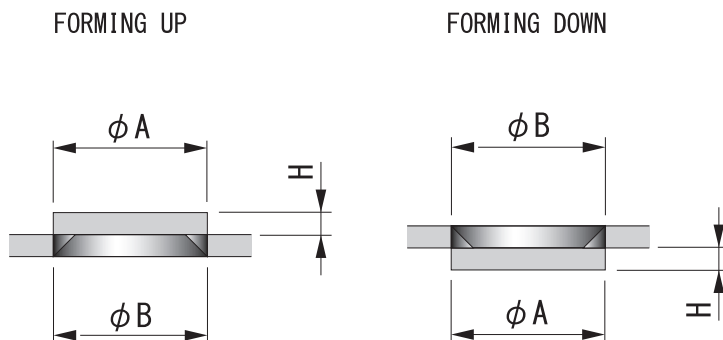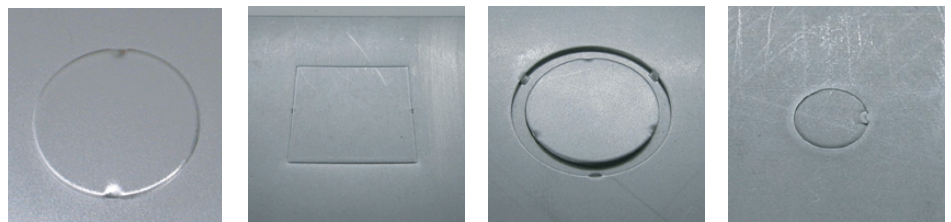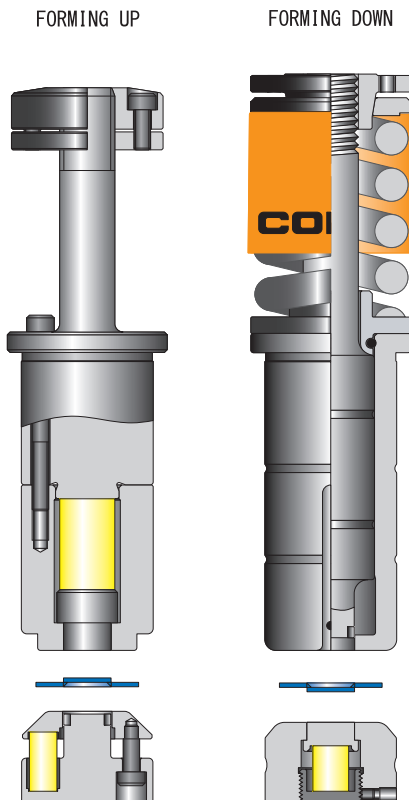

Forming process of piercing a hole and keep the slug on the sheet metal by tabs.


When using a hole, remove the slug using a screwdriver.

**BRIDGE , DOUBLE BRIDGE**

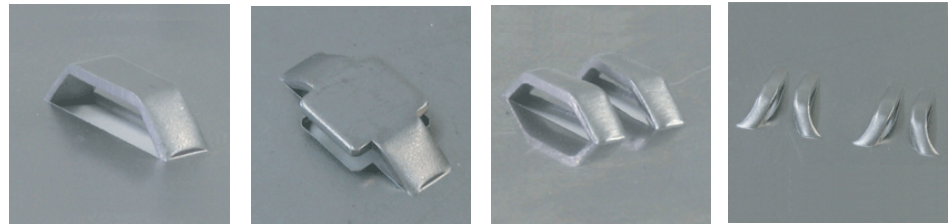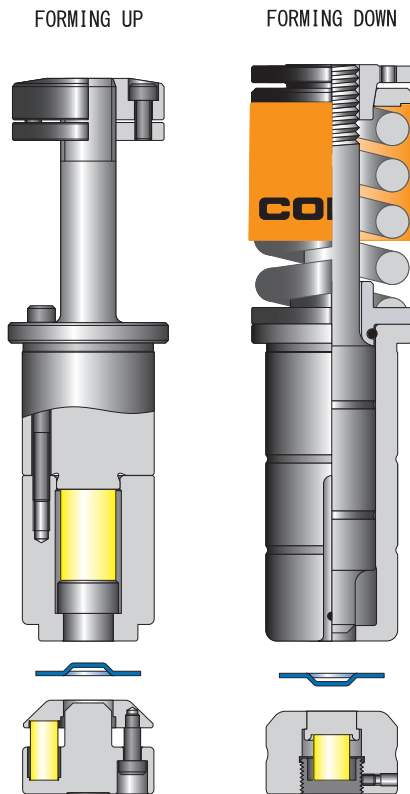



SINGLE BRIDGE (FORMING UP)

DOUBLE BRIDGE (FORMING UP)

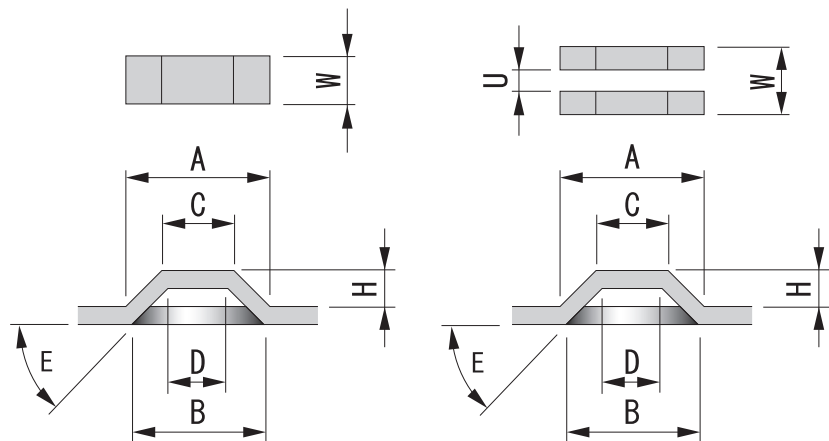


Forming process of lance like a bridge.

**LANCE (Z-BENDING)**

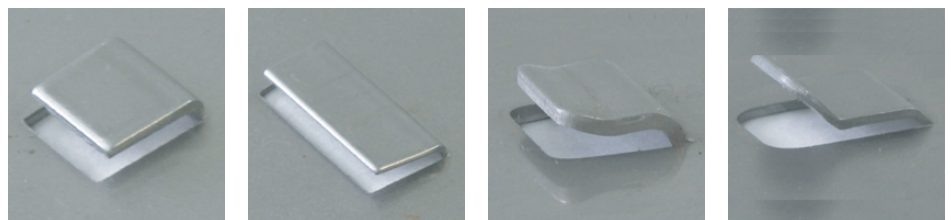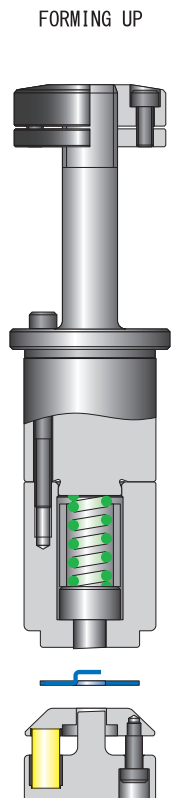

Forming without pre-hole

Forming after pre-hole

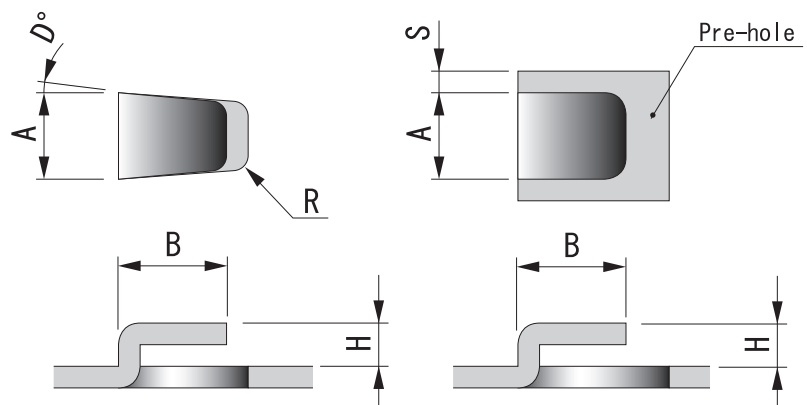



Forming process of lance like Z figure.

Used for hook, locator and stopper.




**LANCE (L-BENDING)**


FORMING UP

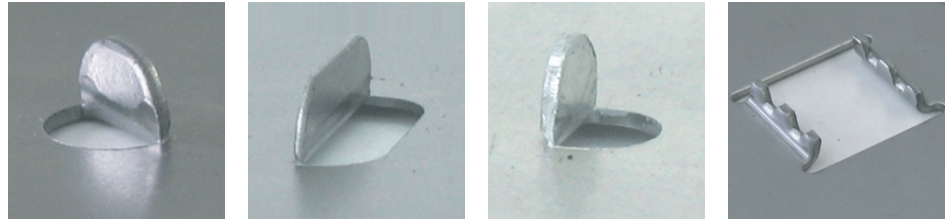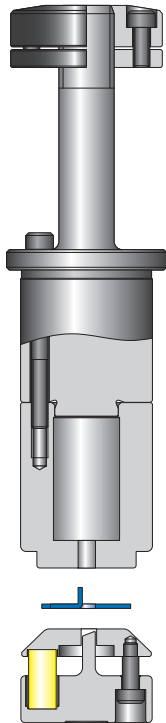

Forming without pre-hole

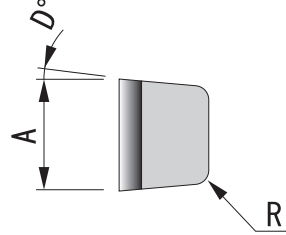

Forming after pre-hole

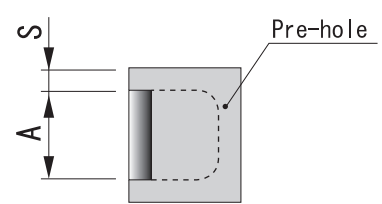

Forming process of lance like L figure.


Used for hook, locator and stopper.

**BENDING (OFFSET TOOL)**


FORMING UP




FORMING DOWN

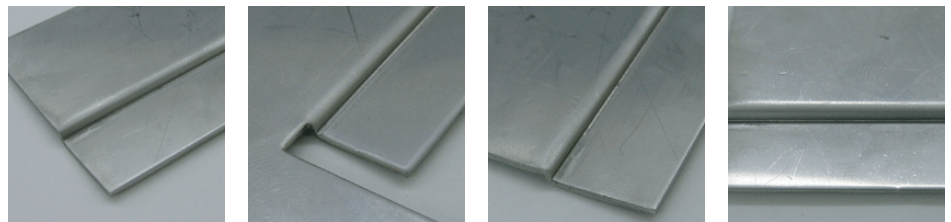

FORMING UP

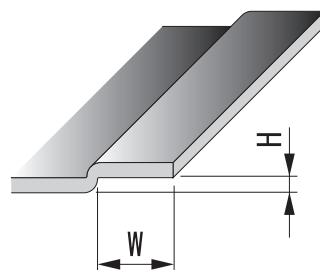

FORMING DOWN

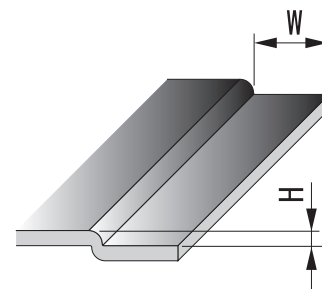


Forming process of bending that can hit continuously along the sheet.


Used for the overlaying the sheet.

**LANCE FOR AIR FLOW**

FORMING UP

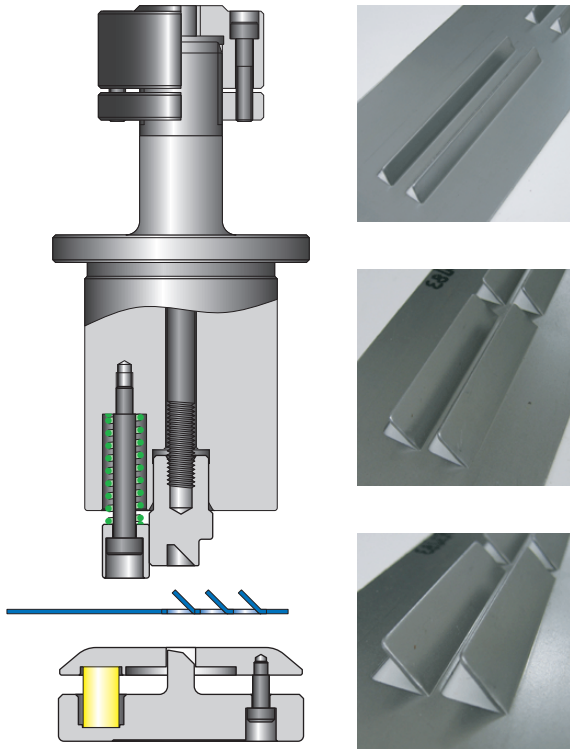

FORMING UP

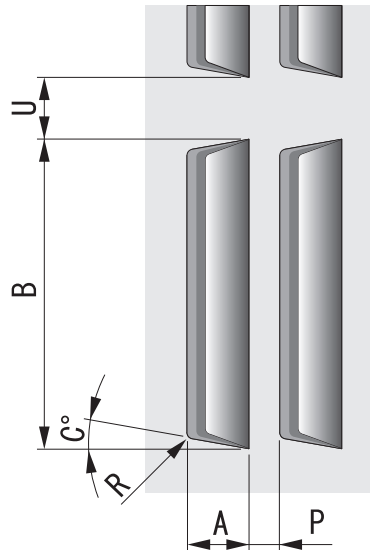


Forming process of lance to create an opening.

Used to provide air flow or ventilation.


← ② ← ① Order of punching

**LOUVER FOR AIR FLOW**

FORMING UP

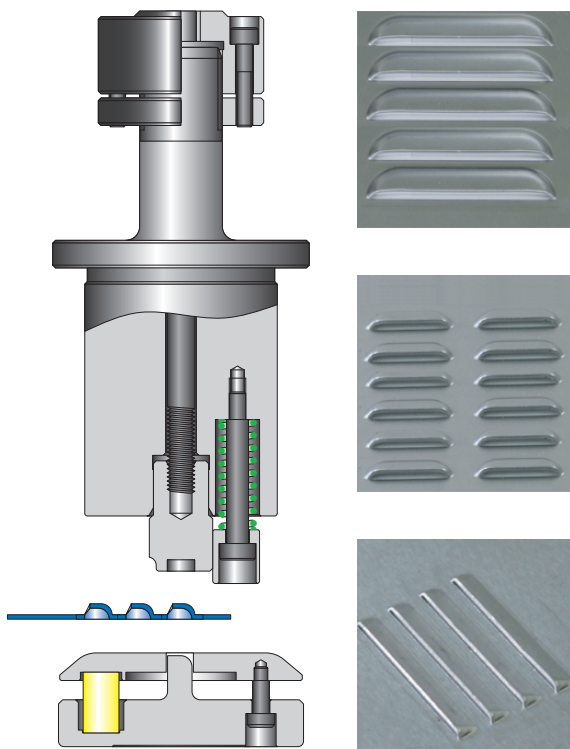

FORMING UP

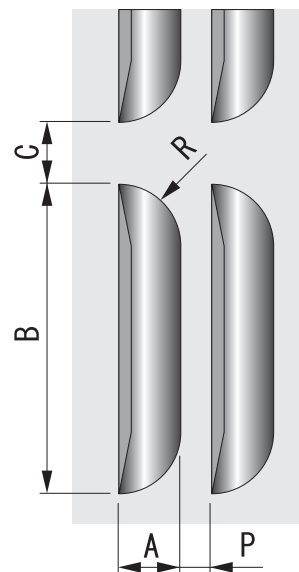


Forming process of louver to create an opening.

Used to provide air flow or ventilation.


Order of punching ① → ② →



**CARD GUIDE**

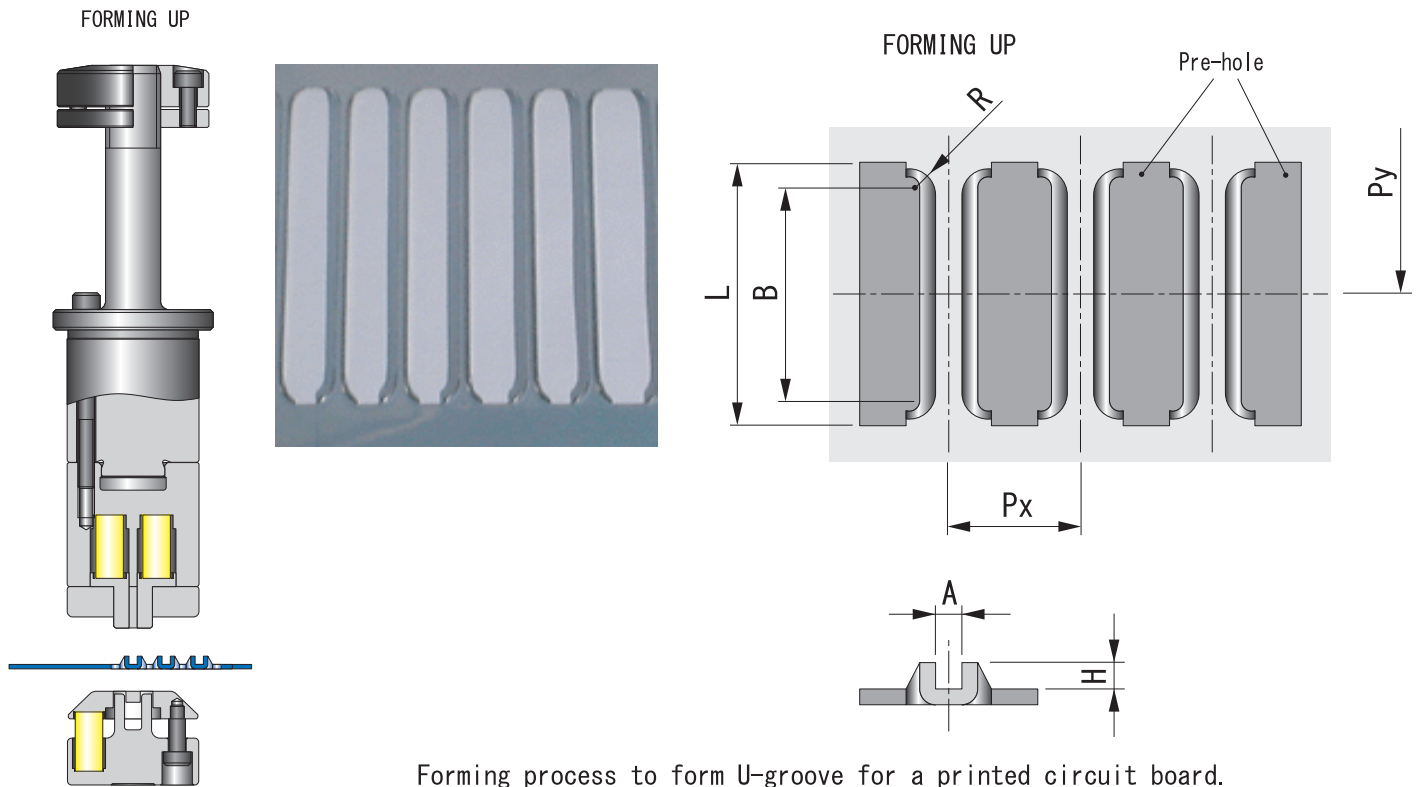

**BEADING**

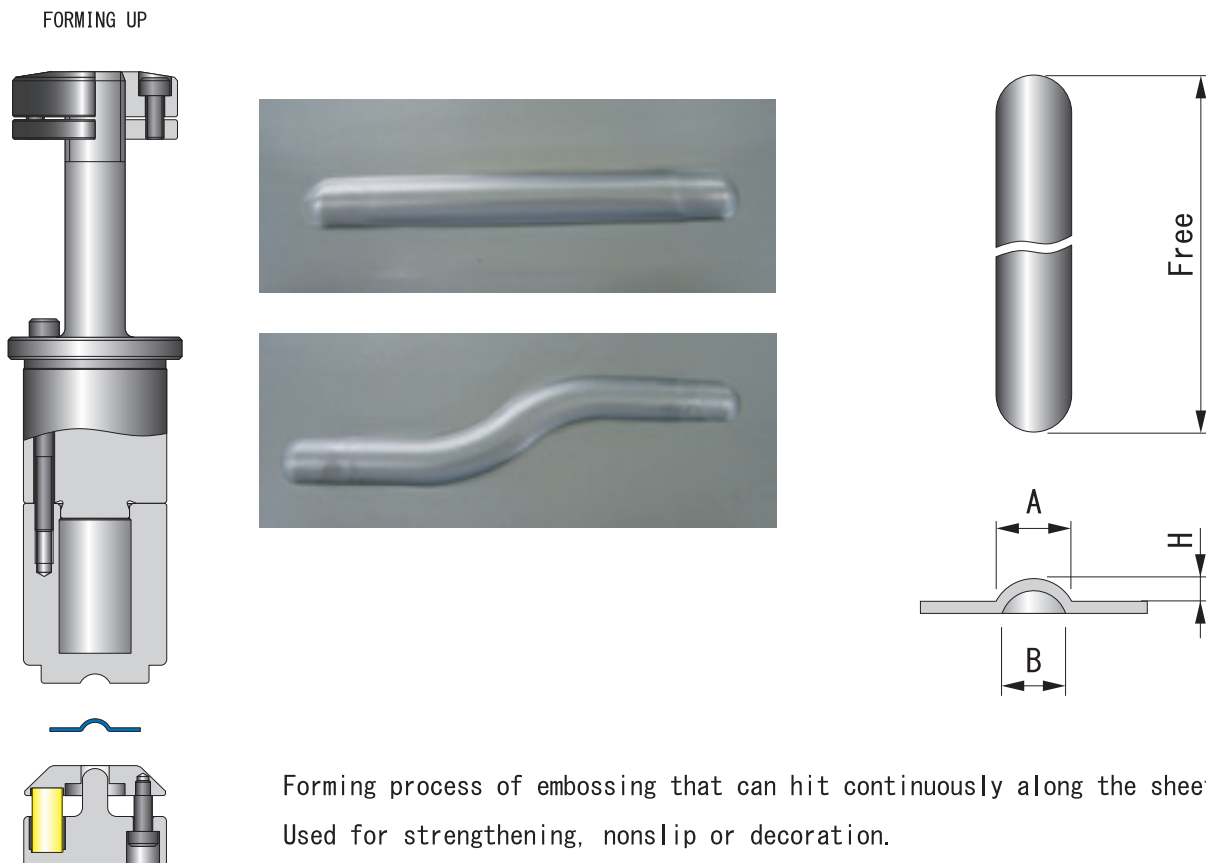

# CONIC HIGH PERFORMANCE TOOLING

- Amada thin turret tooling
- TRUMPF type tooling
- Salvagnini type tooling  
also available.



## CONIC Co., Ltd.

ISO9001:2015 ASR Q2517 / Okayama factory

10-5 Taiheidai, Shoo-cho, Katsuta-gun,  
Okayama 709-4321 Japan  
TEL: +81 868 38 6154 FAX: +81 868 38 6331  
E-mail: [tools@conic.co.jp](mailto:tools@conic.co.jp)  
<https://www.conic.co.jp/>

## CONIC PRECISION Co., Ltd.



55/22 Moo 4, Buengkumphroy, Lumlukka,  
Phatumthani 12150 Thailand  
TEL: +66 2 159 9870-1 FAX: +66 2 159 9872  
E-mail: [conic\\_thai@conic.co.jp](mailto:conic_thai@conic.co.jp)  
<https://www.conic.co.jp/thai/>

## The Representative office in Vietnam

4F VIN OFFICE Building No. 362/19 Ung Van Khiem Street,  
Ward 25, Binh Thanh District, Ho Chi Minh City, Vietnam  
Tel +84(0)28-7300-0250  
E-mail [conic\\_vn@conic.co.jp](mailto:conic_vn@conic.co.jp)



Dea l e r

**MARKING (STAMPING)**

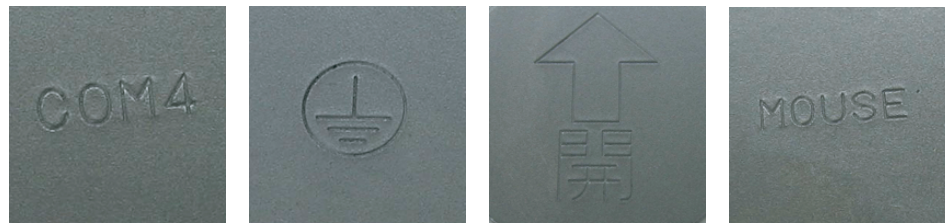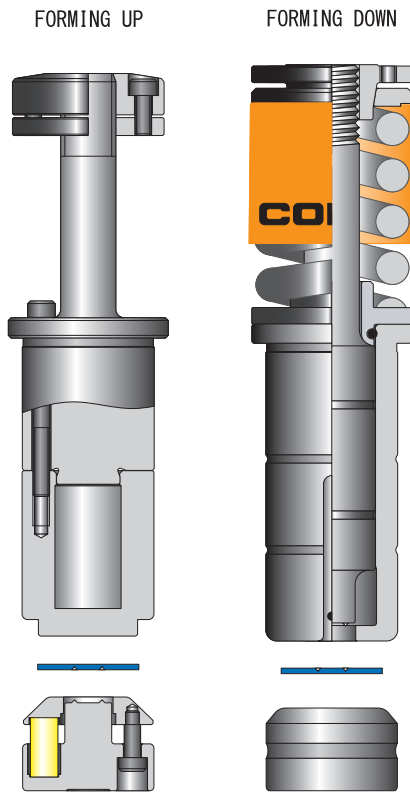

FORMING UP



FORMING DOWN

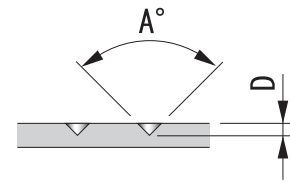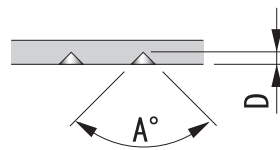

CONIC 金型 ABC 



Forming process of stamping the character or logo etc.

**MARKING (EMBOSS)**

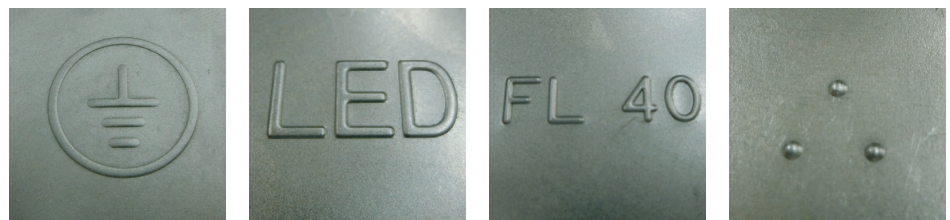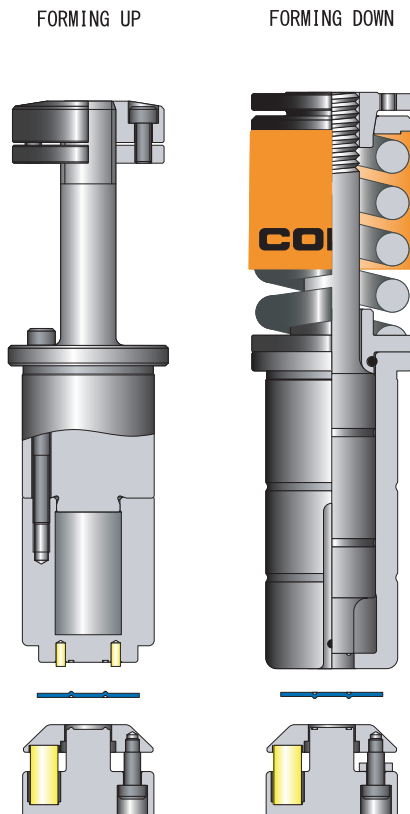

FORMING UP

FORMING DOWN

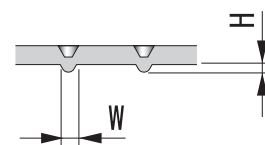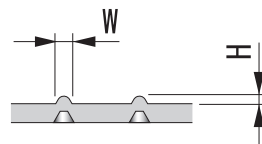


CONIC ABC 


Forming process of embossing the character or logo etc.

### FORMING UP

#### AMADA TYPE

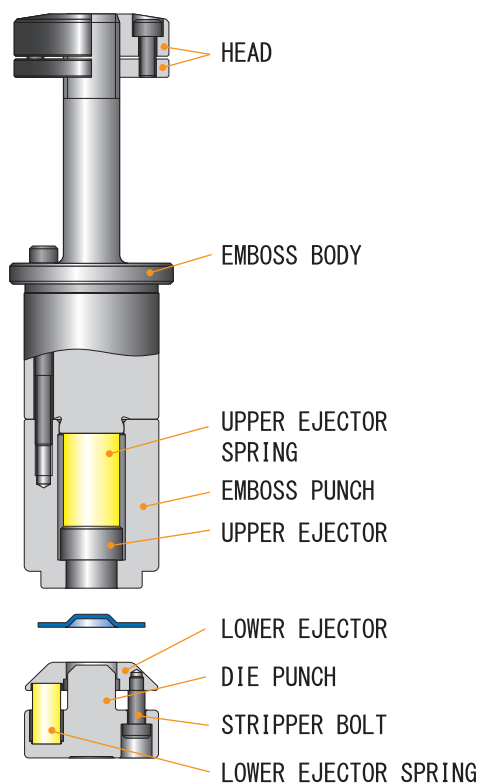


#### MURATA STYLE 114

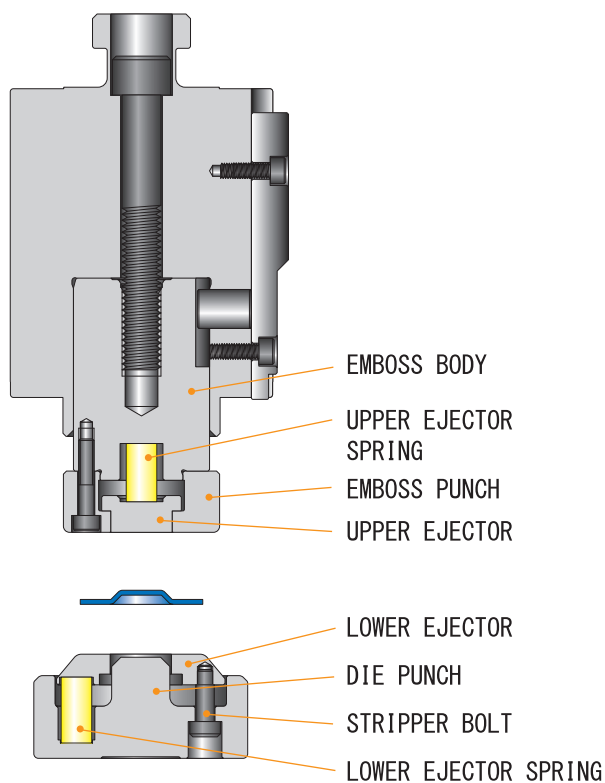


### FORMING DOWN


#### AMADA TYPE

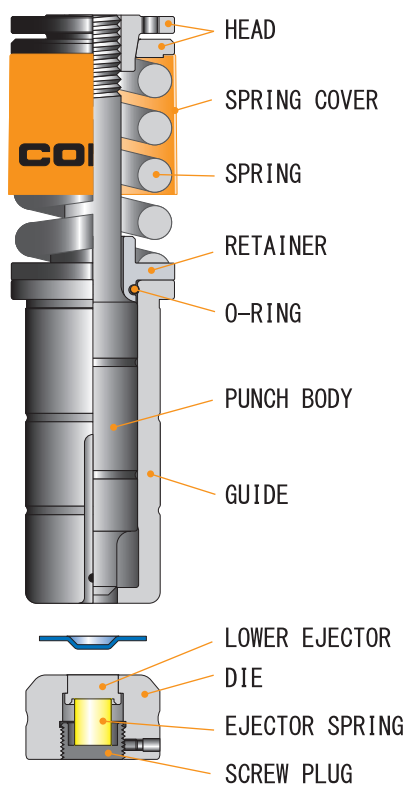

#### MURATA STYLE 114

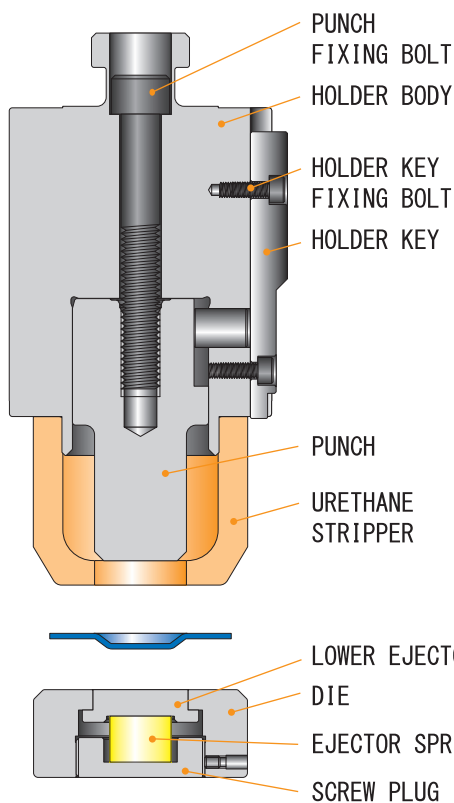

#### MURATA VULCAN TOOL


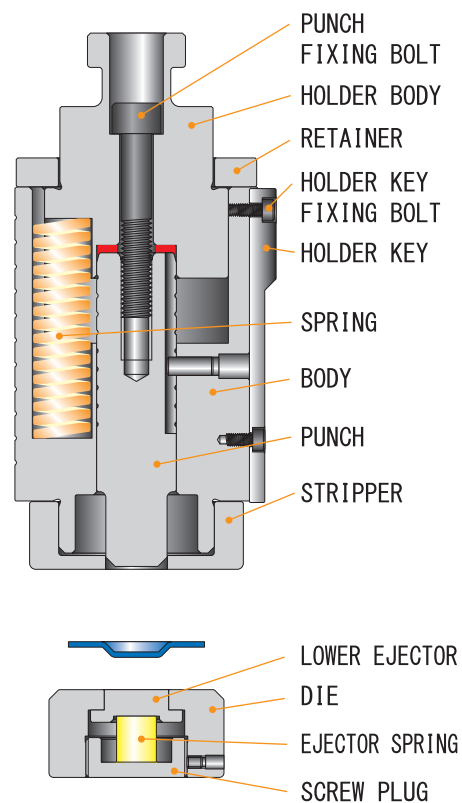


# TECHNICAL INFORMATION

## CALCULATE PUNCHING FORCE (TONNAGE)

Tonnage capacity is different depending on machines.  
Use the calculation formula below to prevent from over tonnage.

$$\text{Tonnage (ton)} = \frac{\text{Circumference(mm)} \times \text{Material thickness(mm)} \times \text{Shear resistance(kg/mm}^2\text{)}}{1000}$$

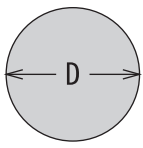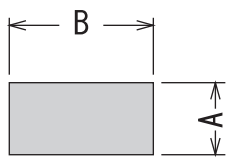
Circumference	
Round	Shaped
Diameter x 3.14	(Length dimension + Width dimension) x 2
	
Circumference = D x 3.14	Circumference = (A + B) x 2

Shear resistance by material	
Material	Shear resistance (kg/mm <sup>2</sup> )
Mild Steel	26~35
SS400	33~42
Stainless Steel	52~56
Aluminum	7~16
Copper	18~30
Brass	22~40


### <Calculation example>

The tonnage when piercing  $\Phi 40$  to Mild Steel T=1.6mm.

$$\frac{40 \times 3.14 \times 1.6 \times 35}{1000} = 7 \text{ (ton)}$$

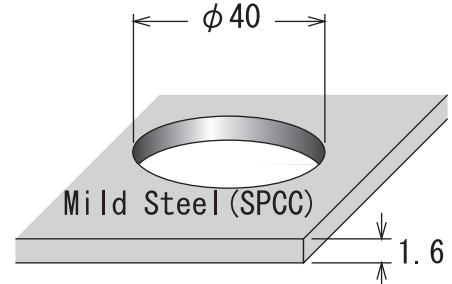

## DIE CLEARANCE

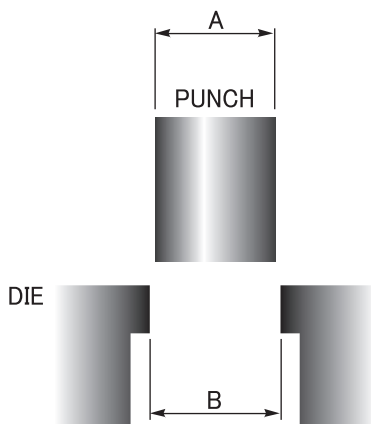

### ■ DIE CLERANCE IS ...

Die clearance is difference between punch diameter and die diameter.

$$\text{Die clearance} = B - A$$

### ■ RECOMMENDED DIE CLERANCE


$$\text{Die clearance} = \text{Material thickness} \times \text{Clearance Ratio}$$

Material	Clearance Ratio	Material thickness					
		0.5~1.0	1.2	1.5	2.0	2.3	3.2
Mild steel	0.15	0.15	0.2	0.25	0.3	0.4	0.5
Stainless steel	0.2	0.2	0.25	0.3	0.4	0.5	0.6
Aluminum	0.1	0.15	0.15	0.15	0.2	0.25	0.35
Copper	0.1	0.15	0.15	0.15	0.2	0.25	0.35


# TECHNICAL INFORMATION

## JOINT METHOD


### CORNER JOINT

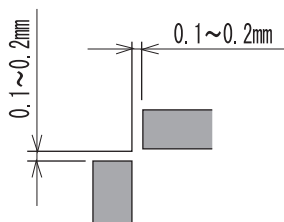


Joint of corner part

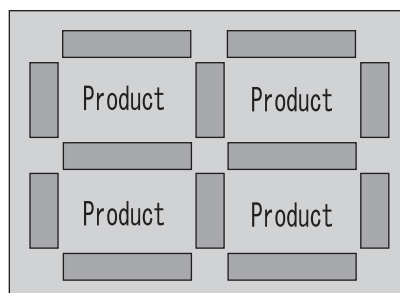


### MICRO JOINT

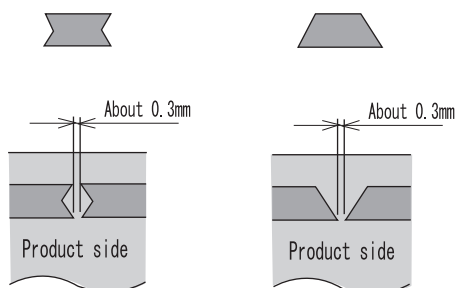


Joint of straight part

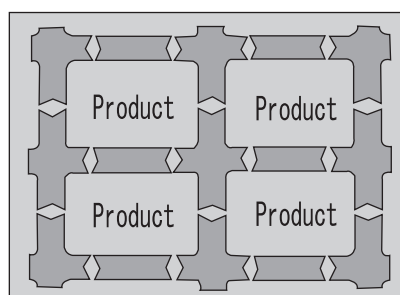

### WIRE JOINT

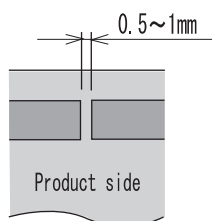

Joint of straight part

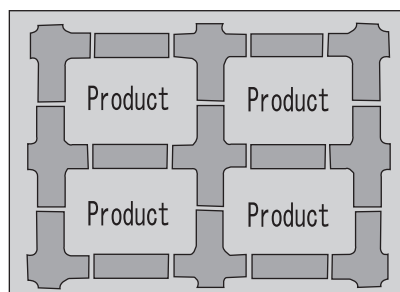

## CORNER ROUNDING

Standard Corner rounding tool	Corner rounding tool with tangent line	Corner rounding tool with joint